

How to configure the access control on ADSL Modem Router?

It is suitable for : **ND150, ND300**

Application:

Access control list (ACL) is used to allow or deny a specific group of IP to send or receive traffic from your network into another network.

STEP-1:

Login the ADSL Router's web-configuration interface at first, and then click Access Management.

STEP-2:

In this interface,click **Firewall>ACL**. Active the ACL function firstly, and then you can create the ACL rule for better access control.

