

# How to Setup Open VPN on A2004NS

## How to access A2004NS USB shared U disk video, pictures?


It is suitable for: **A2004NS, A5004NS, A6004NS**

### Application:

PPTP VPN's PC-to-site mode provides a secure tunnel for the terminal to access the headquarters network. If you are on a business trip and have access to the Internet. Use the VPN client dial-up connection that comes with the terminal to establish a secure tunnel for data transmission.

**Note: IOS 10 systems or higher systems can't use PPTP VPNs**

## Diagram

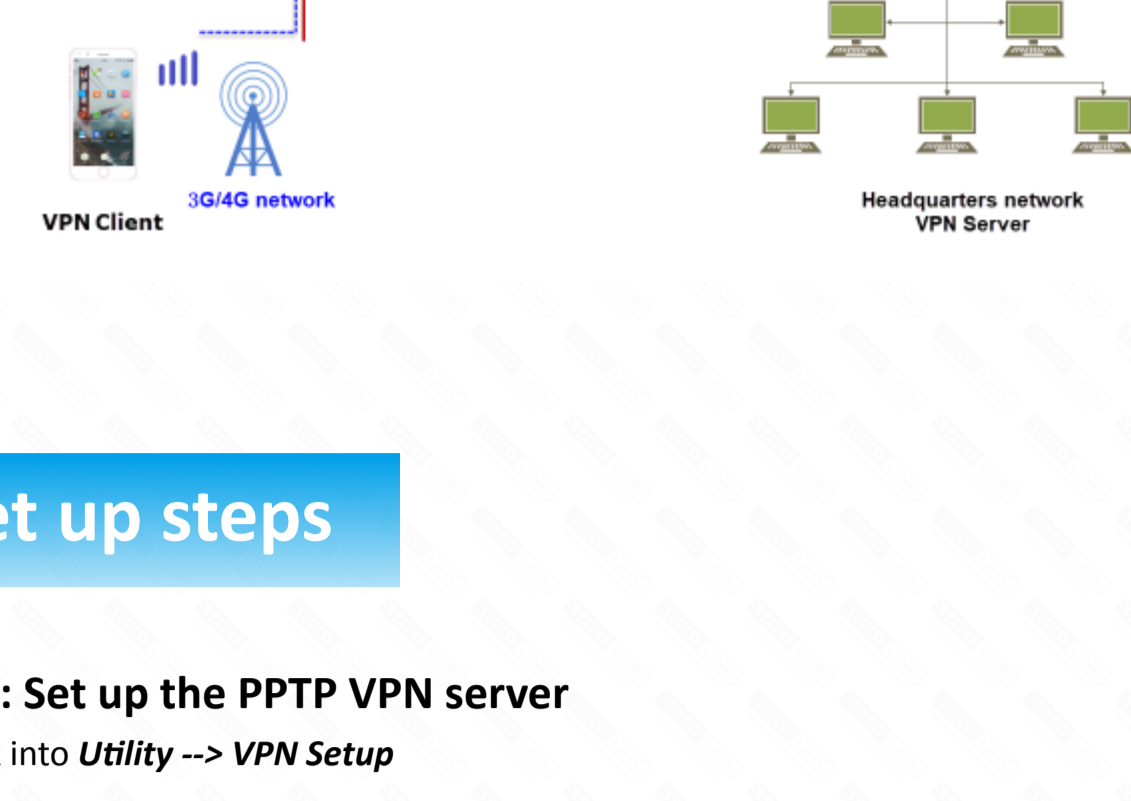


## Set up steps

### STEP-1: Set up the PPTP VPN server


1.1. Click into **Utility --> VPN Setup**




1.2. Turn on PPTP, Select the default **Encryption(MPPE)**

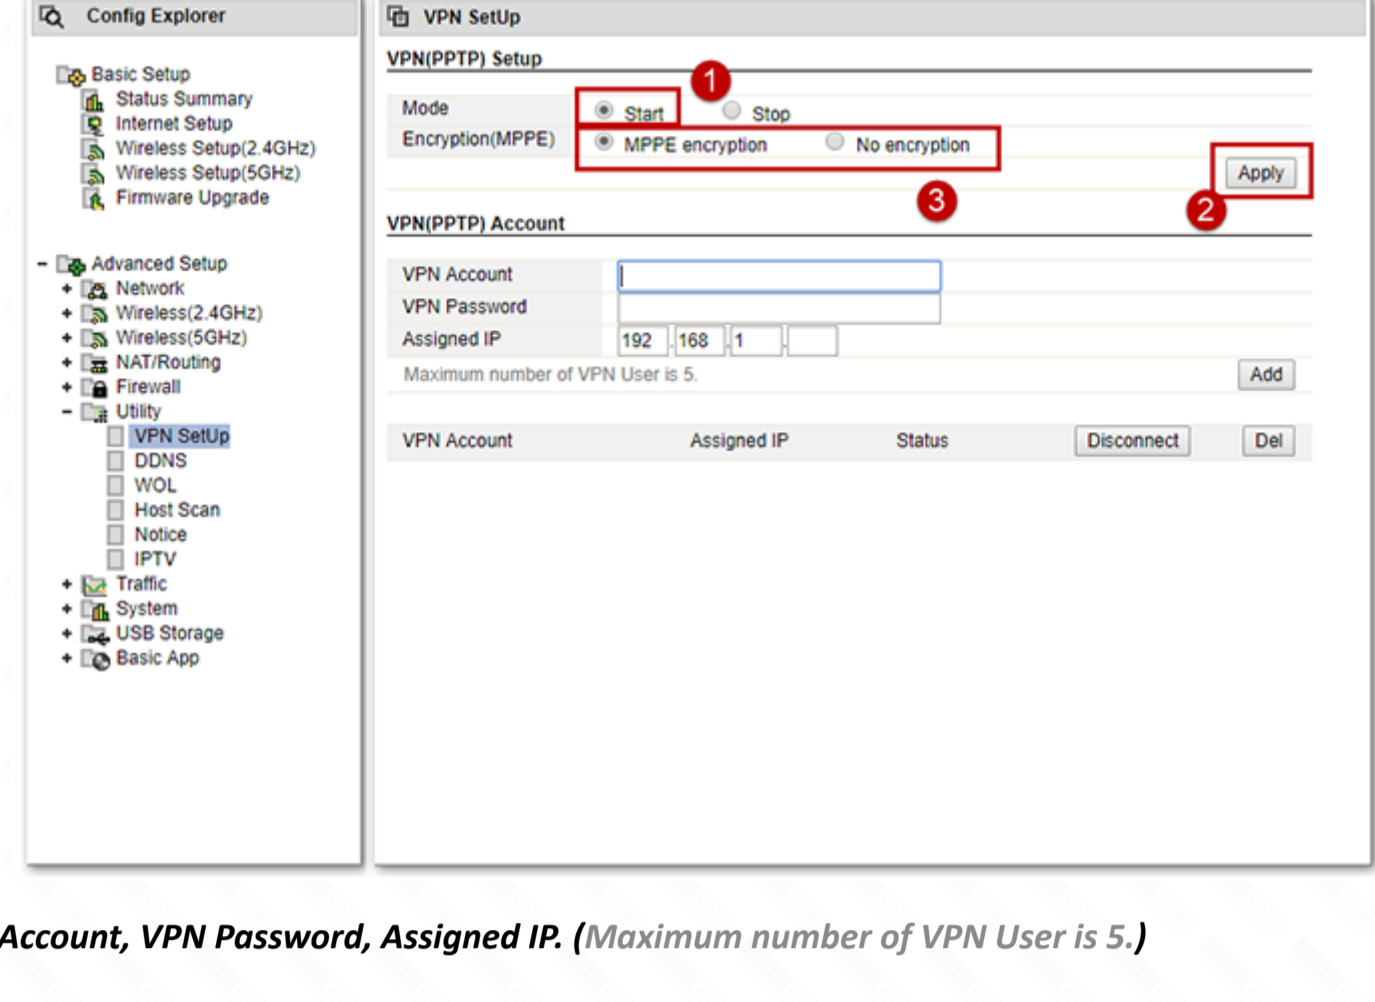

1.3. Enter **VPN Account**, **VPN Password**, **Assigned IP**. (Maximum number of VPN User is 5.)


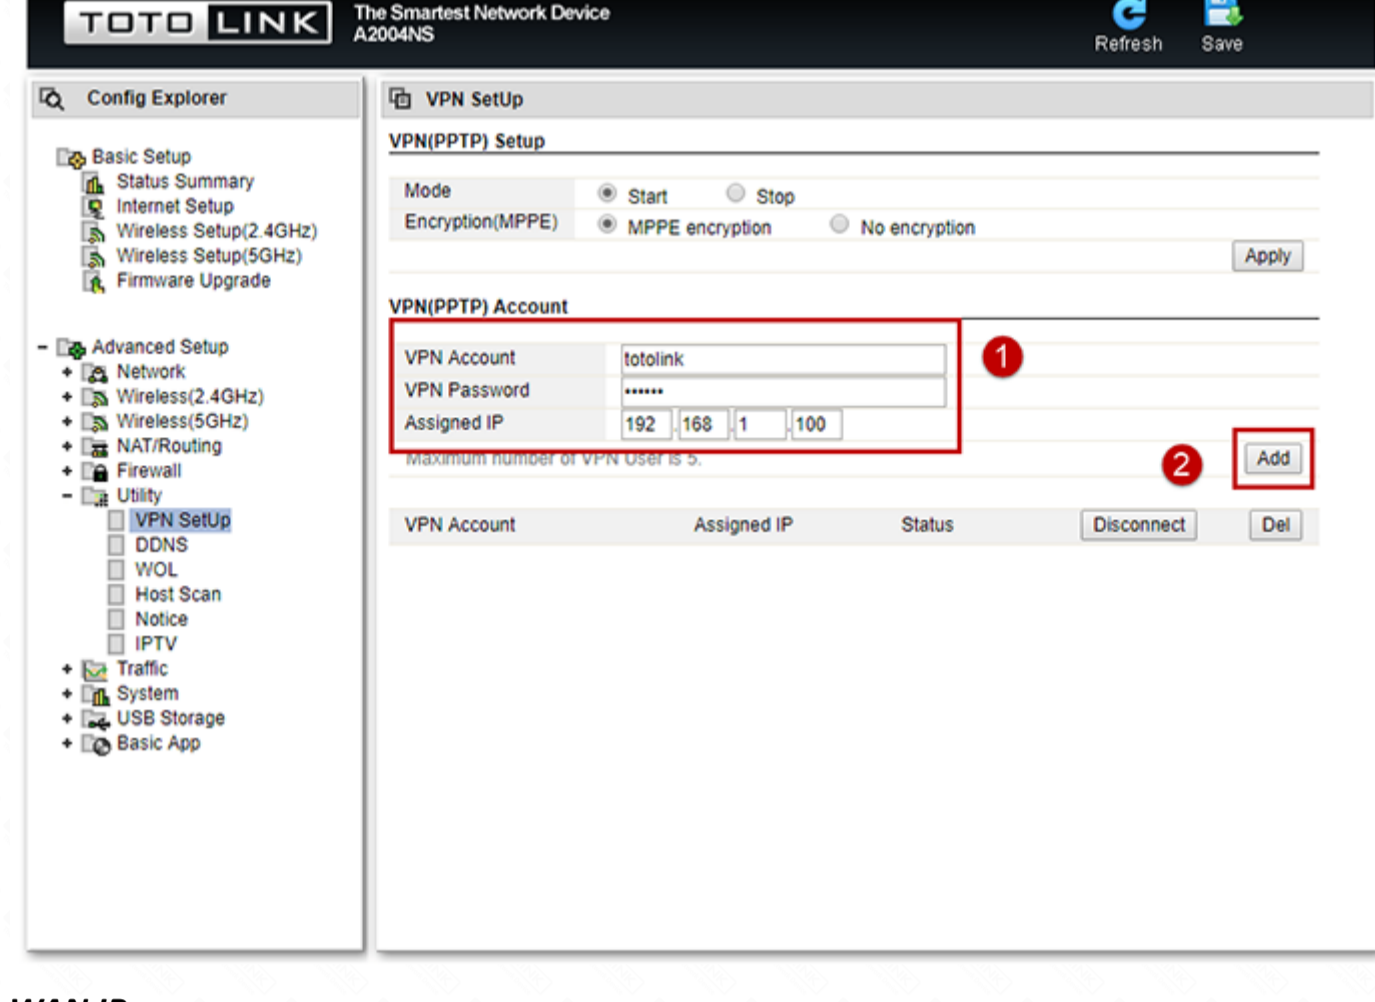


1.4. Remember **WAN IP**.




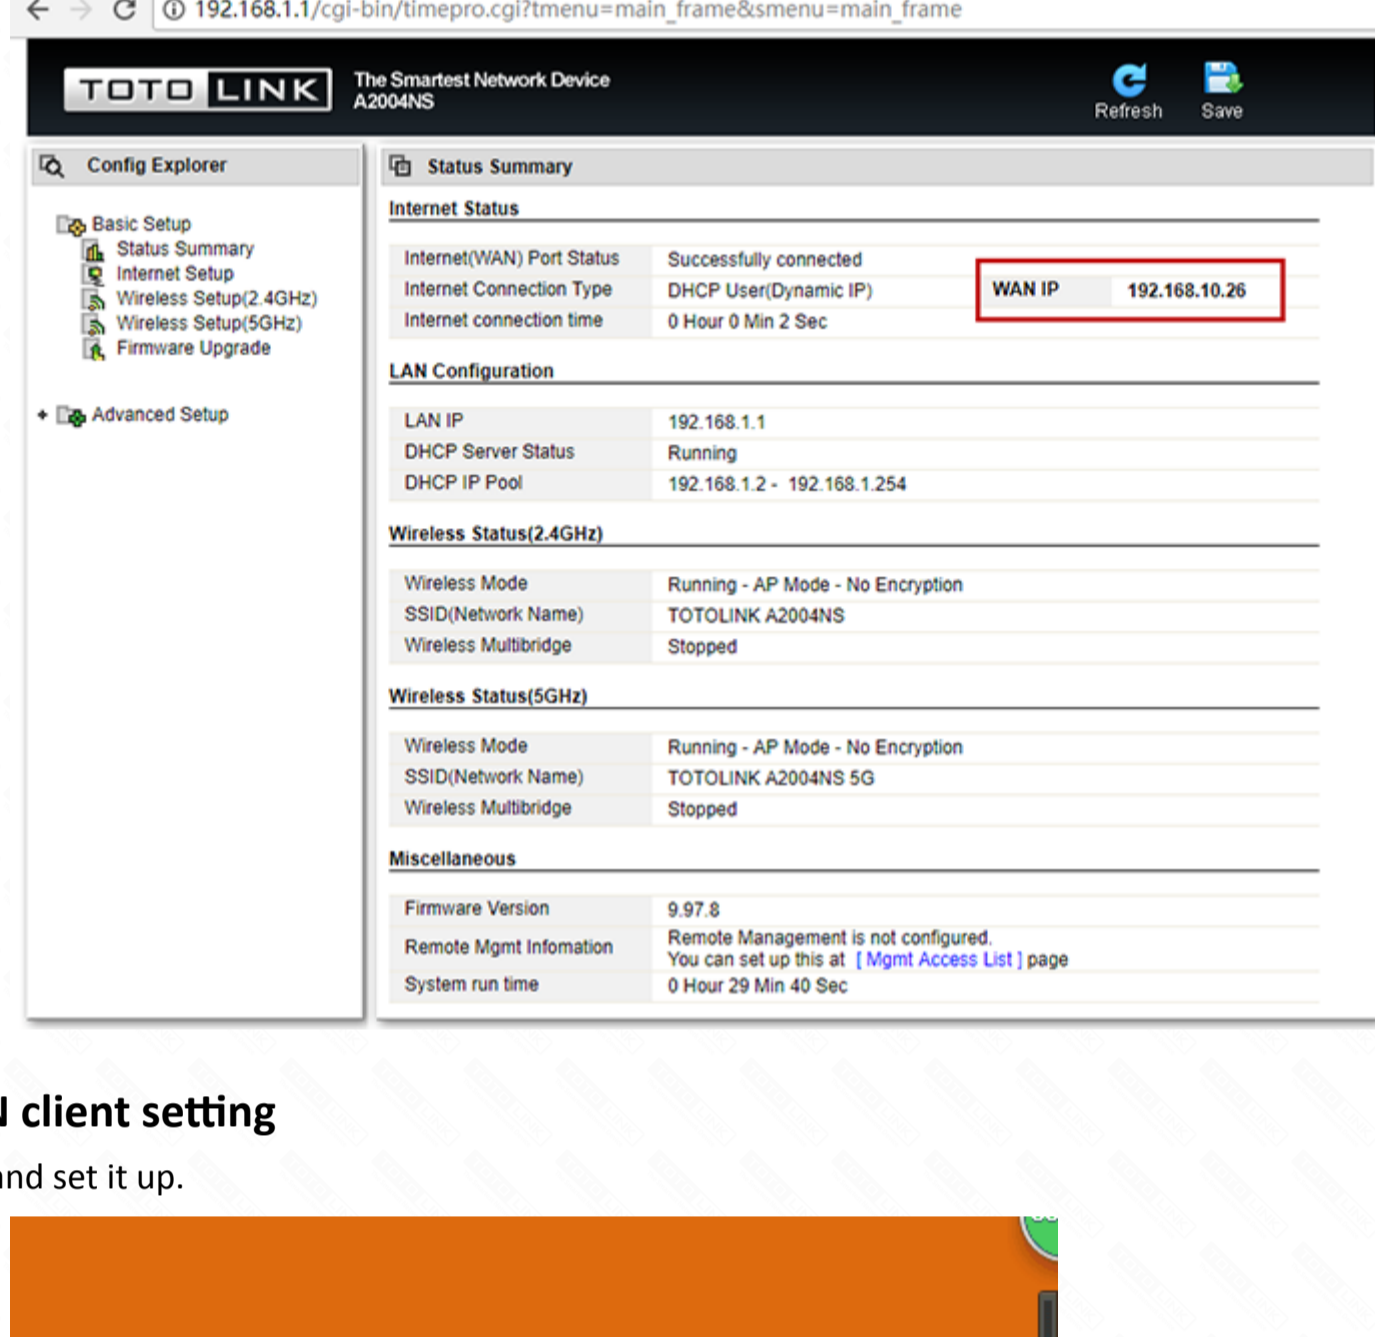


### STEP-2: VPN client setting


Use the VPN client and set it up.

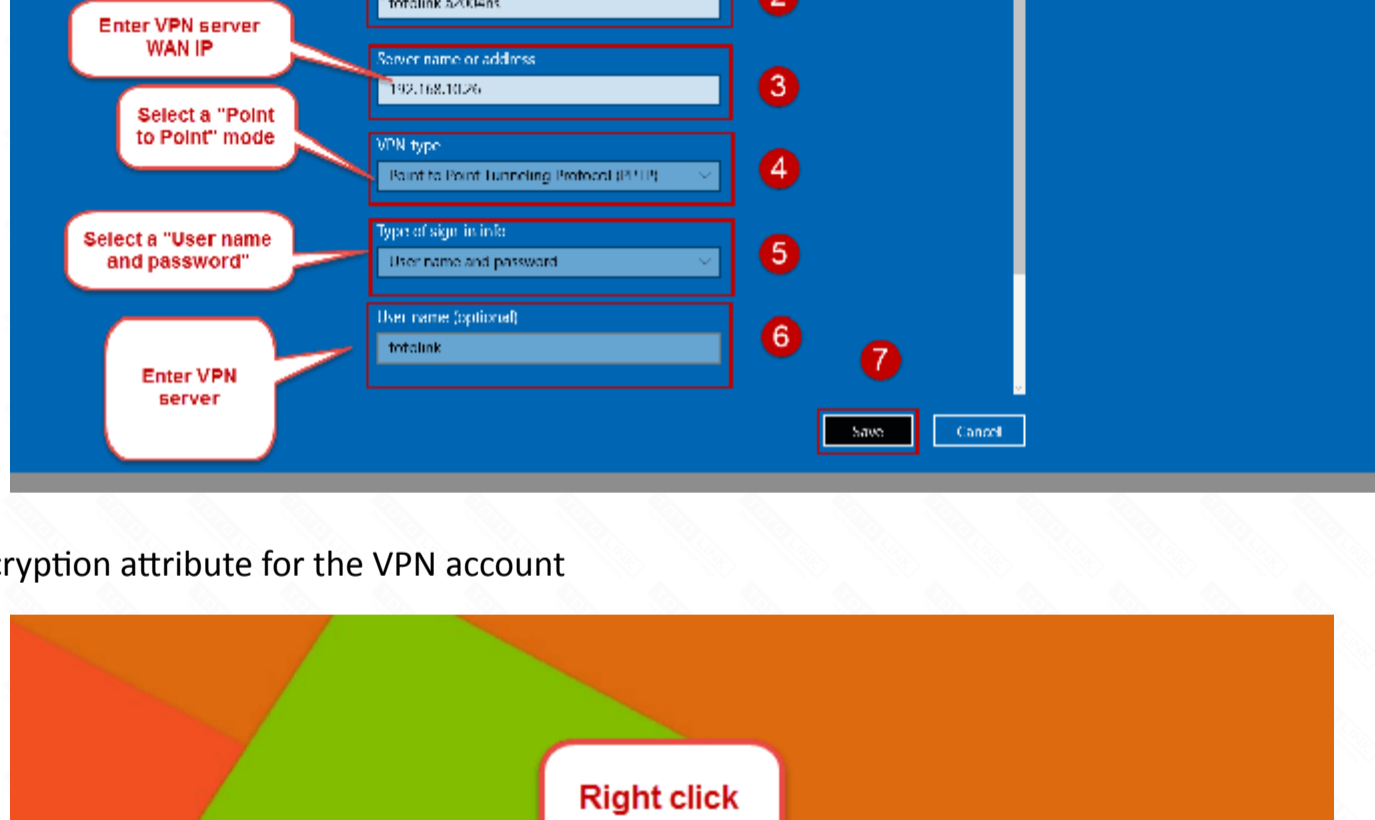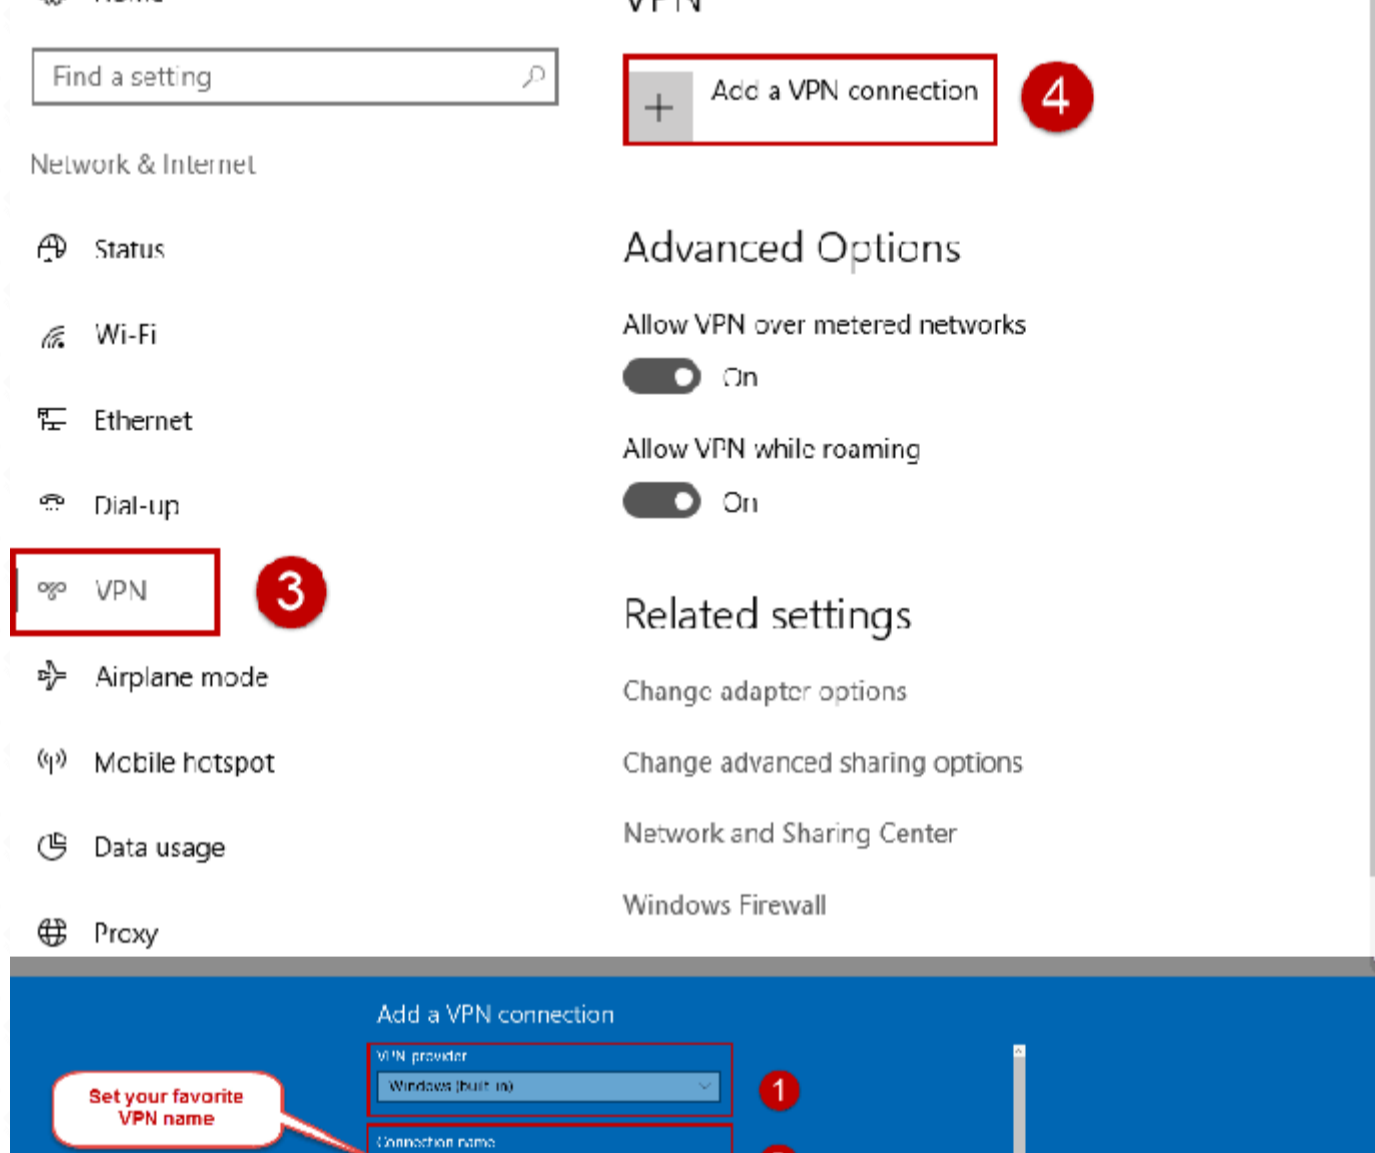

2.2. Set the encryption attribute for the VPN account

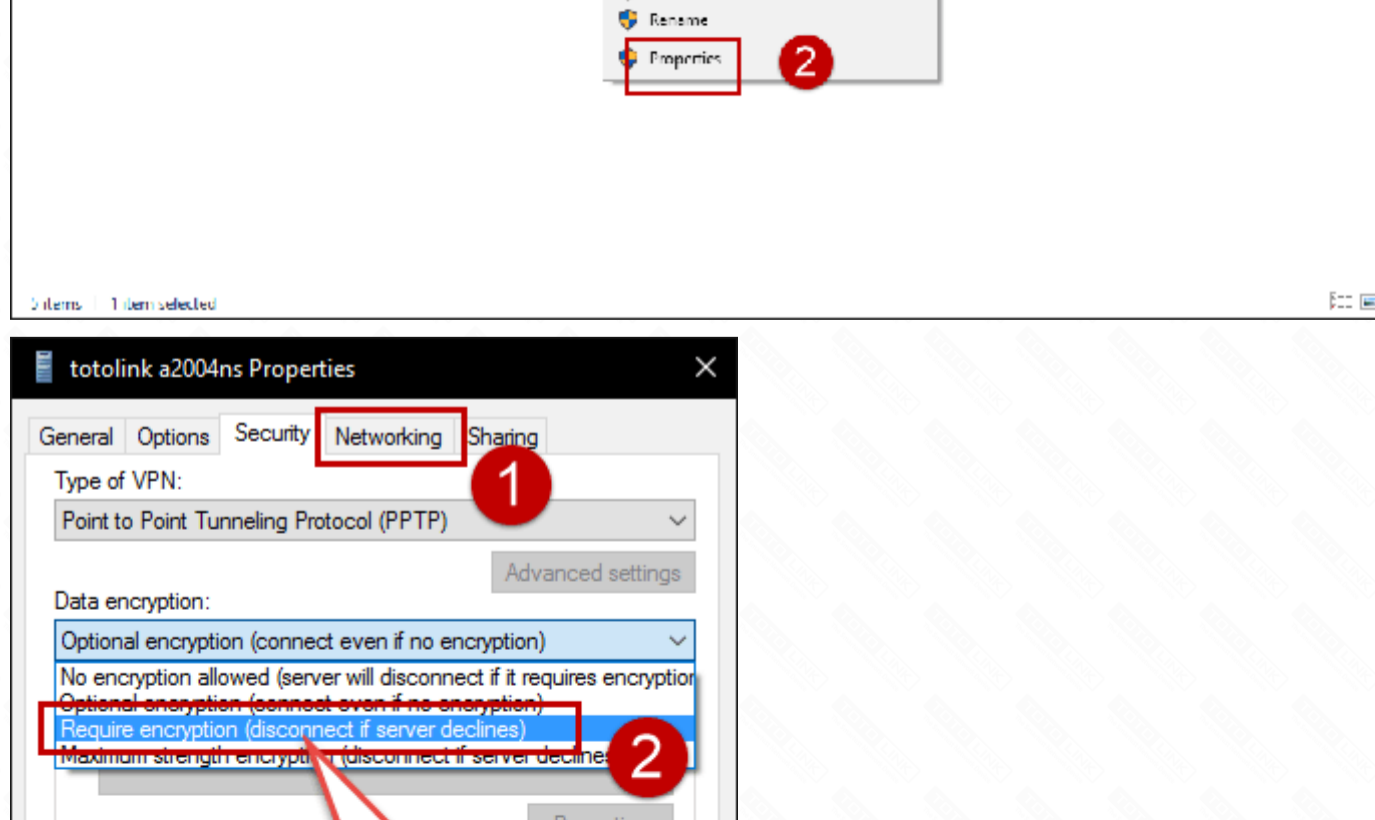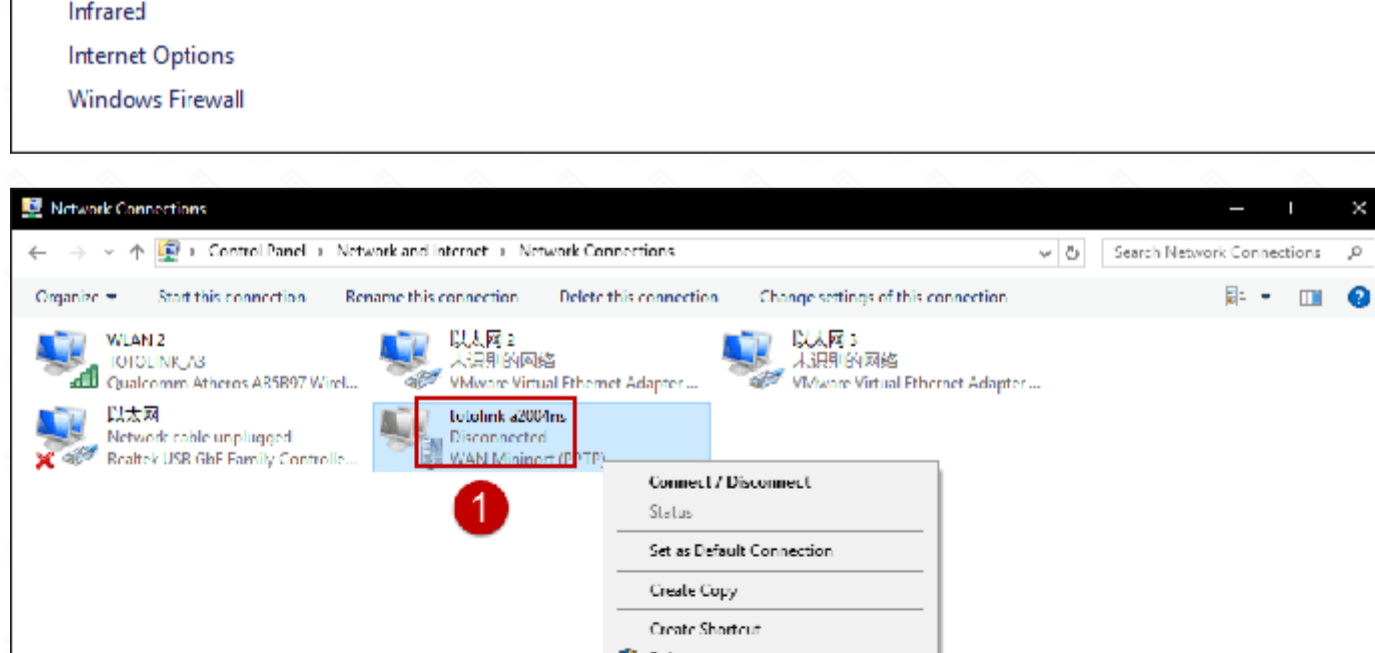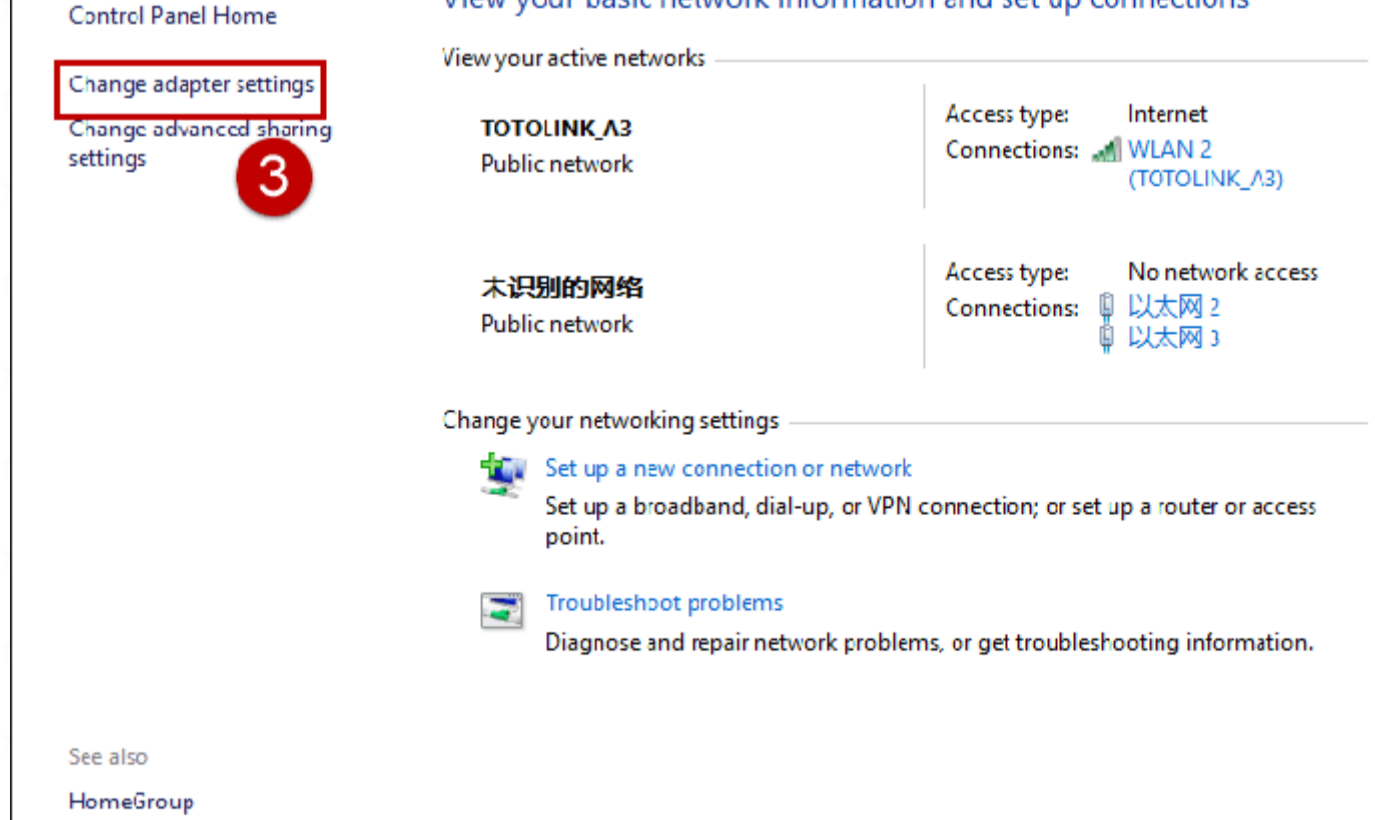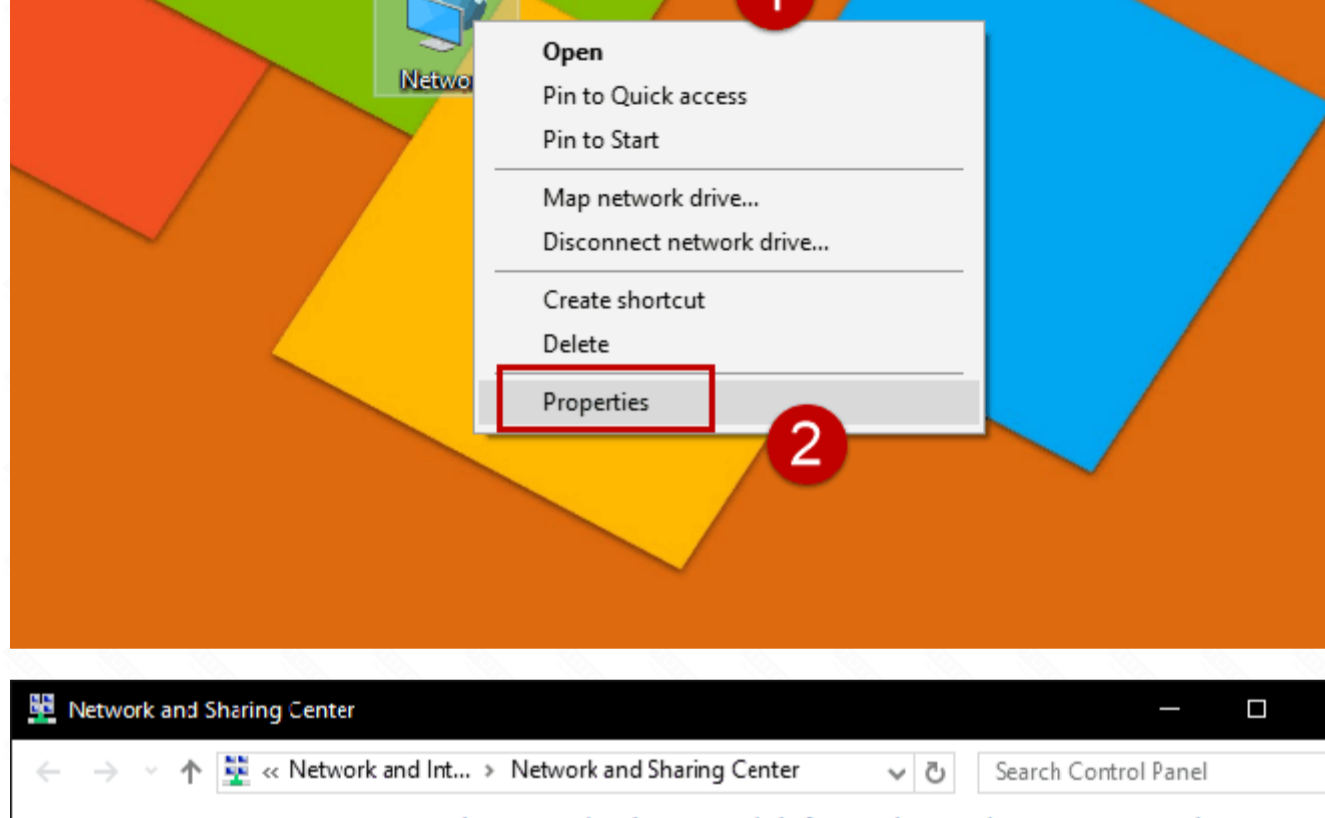

2.3. Set the above parameters, return to the VPN interface, and connect.

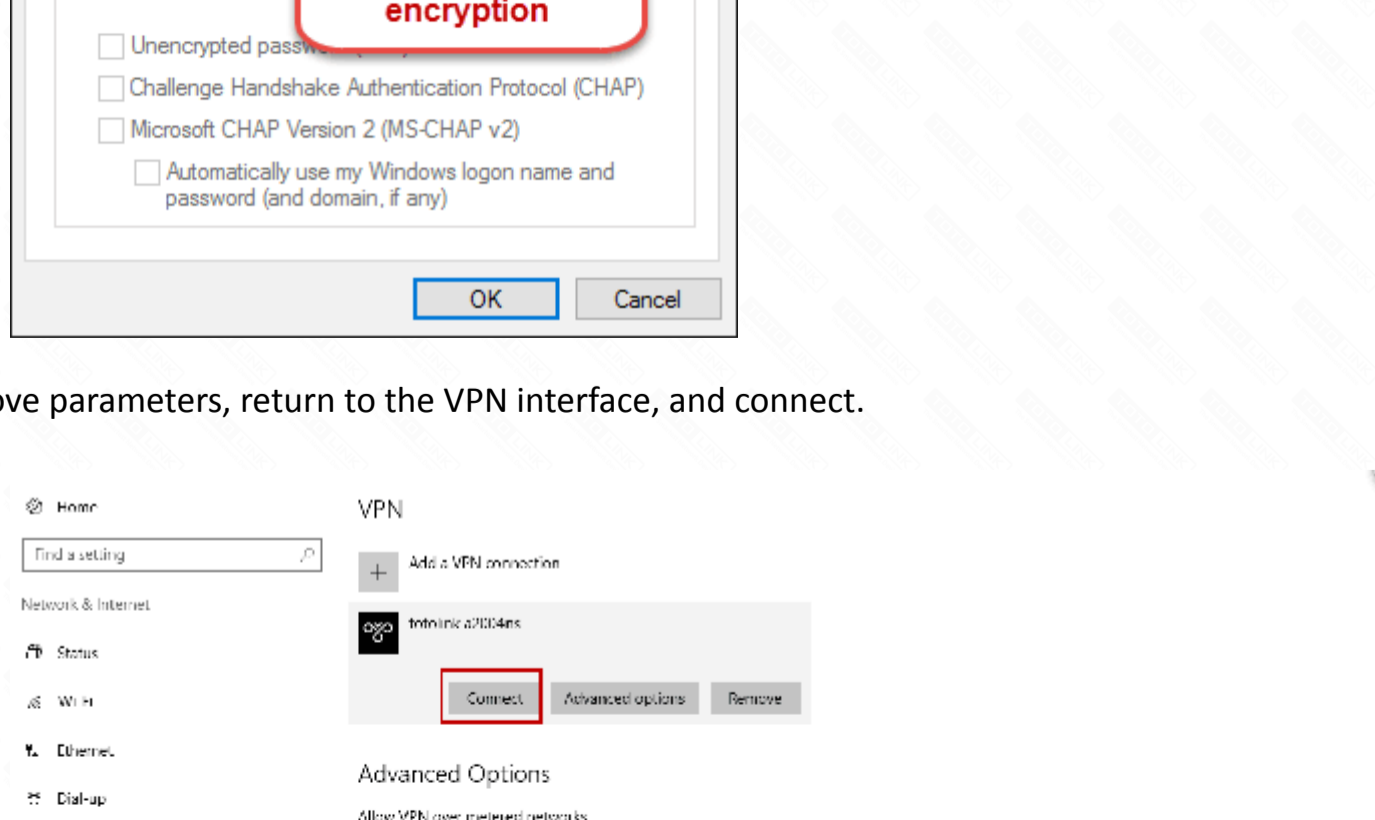

2.4. The following picture is the identity of the successful VPN connection. At this point the VPN has dialed successfully

