

 
How to setup 3G Internet function?

It is suitable for : **N300RU**




STEP-1: Accessing Web page

(1).Connect to the Router by typing 192.168.0.1 in the address field of Web Browser. Then press **Enter** key.




(2).It will show up the following page that requires you to enter valid User Name and Password:

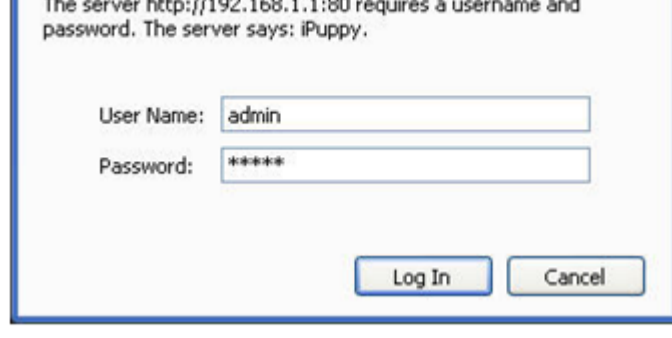

Enter **admin** for User Name and Password, both in lower case letters. Then click **Log In** button or press **Enter** key.

STEP-2: Printer server setting

2-1. Click USB Storage->Printer Server, and select **Enable**.Now the setting on the Router for printer server is finished.

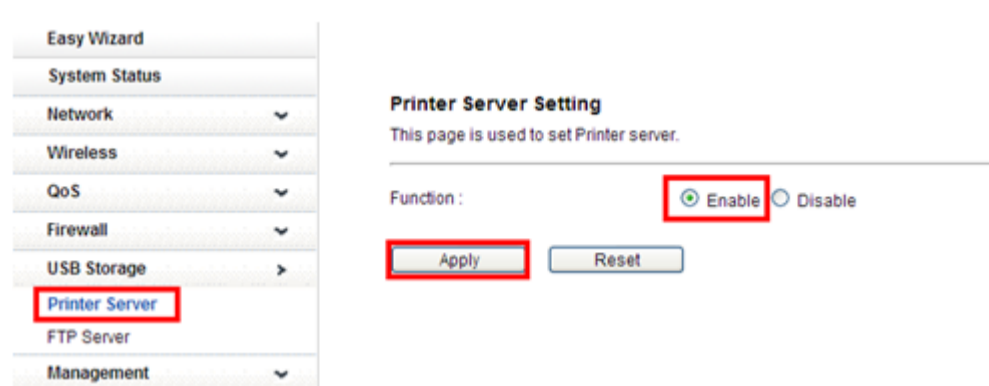


2-2. Before you use this function, please make sure:

- * All the computers connected to this router have installed Printer Driver. If not, please install it first. (Please Refer to How to Install Printer Driver)
- * Your Printer must be an USB Printer that can be connected to the router.


STEP-3: Go to the printer server interface

If all that are ready, please click **Start Server** button to share the printer service connected to the USB port of router.


3-1. Click **Start—Printers and Faxes**:

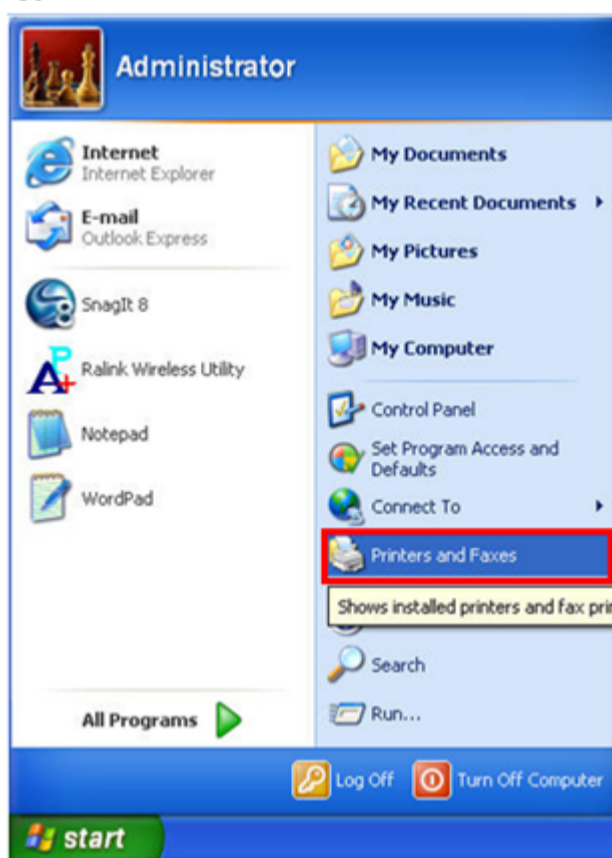


3-2. Click **Add a printer** on the left:

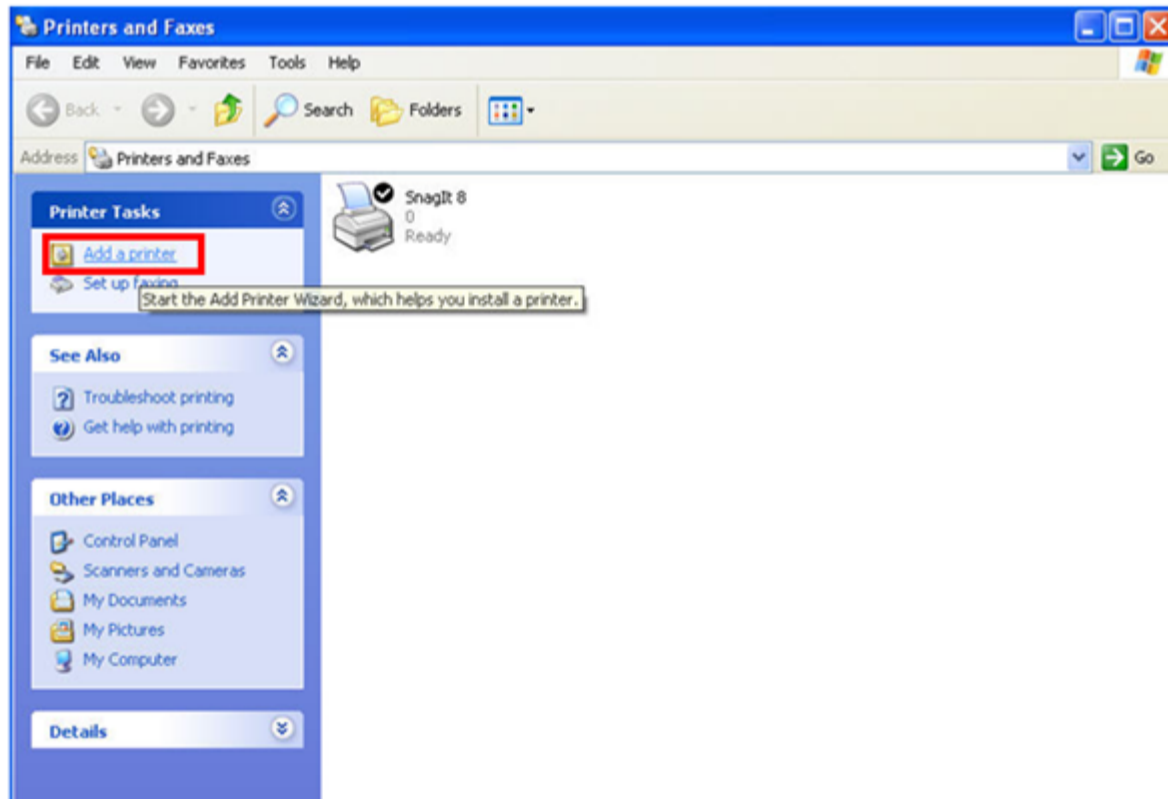


3-3. Click **Next** while it comes out the welcome interface as below.

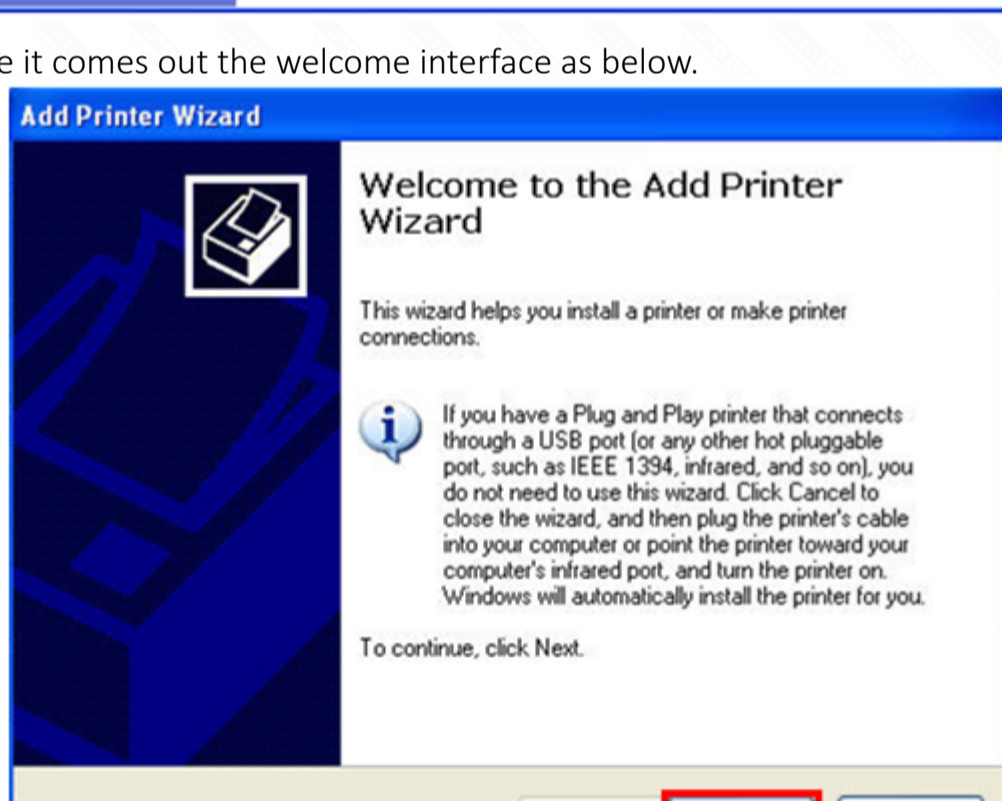


3-4. Choose **“Local printer attached to this computer”** and click **Next**.

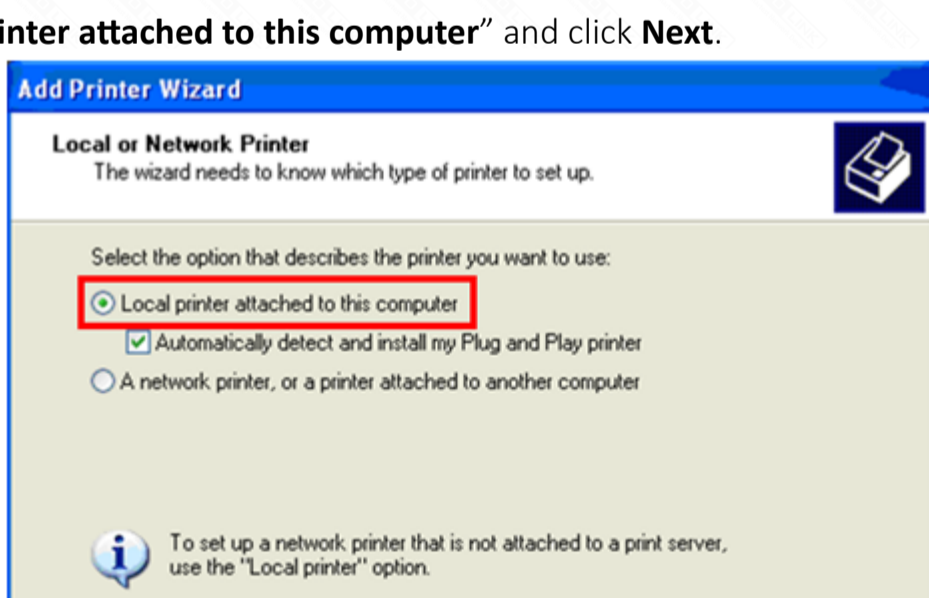


3-5. Select **“Create a new port”** and choose **“Standard TCP/IP Port”** for type of port. Click **Next**.

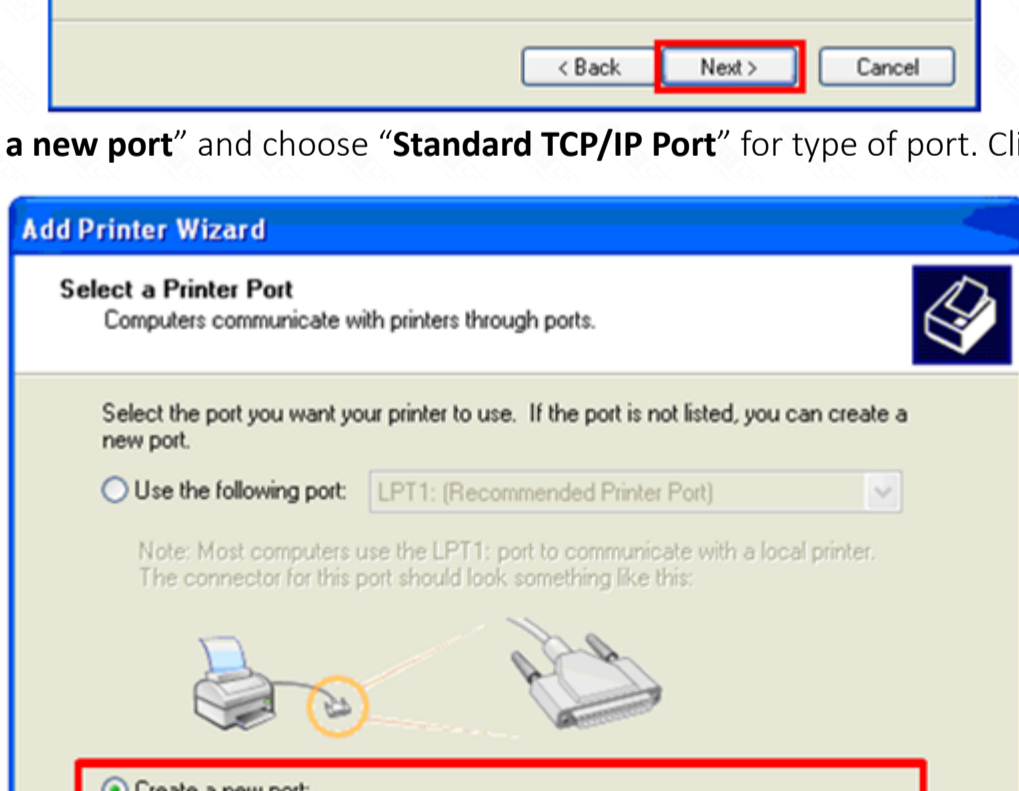

3-6. Please click Next on below window.

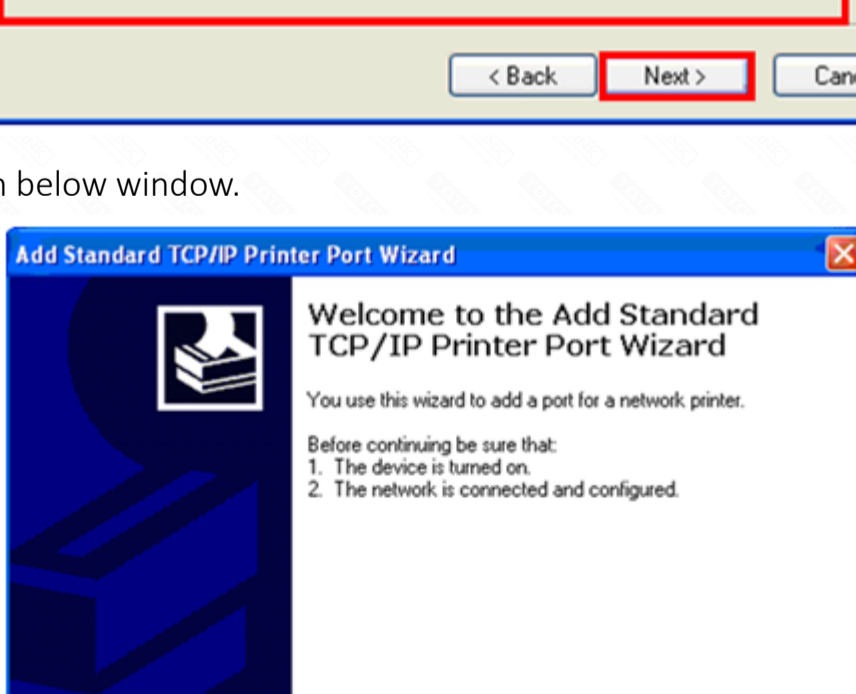

3-7. The most **important**: please type in the gateway of your wireless router, by default, it is 192.168.1.1 for TOTOLINK wireless router.

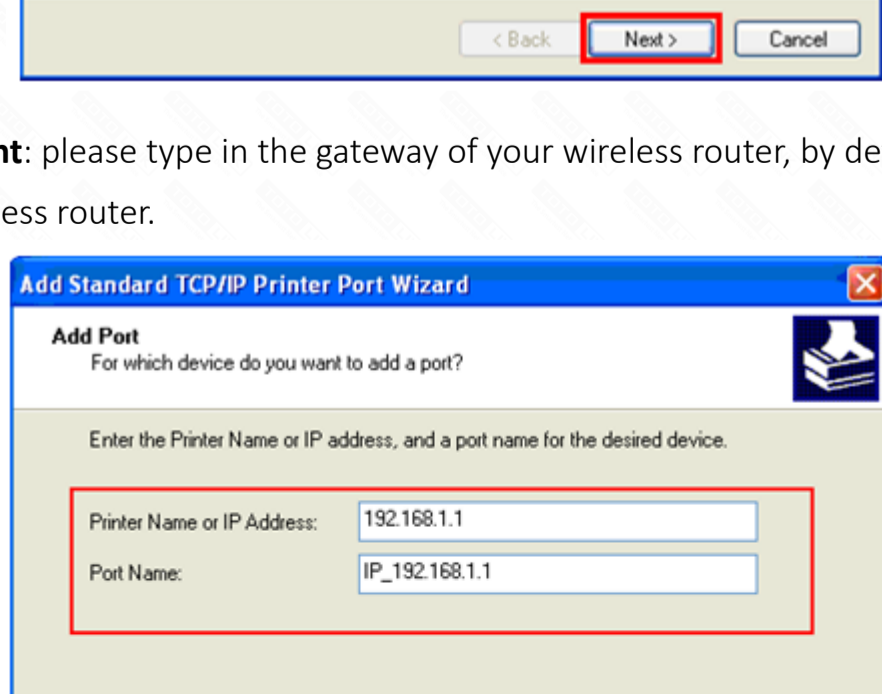

3-8. Now you have to select the right Printer Manufacturer and model number and install it.

Note: Make sure the Printer has been plugged into the USB port of router, else it will show you that there isn't any printer founded.

3-9. After installation, you can share the USB Printer connected to your router.

If you don't want to share your Pinter any more, just choose Disable in the printer server interface.