

How to configure Basic Setting of ADSL Modem Router

It is suitable for : ND150, ND300

STEP-1:

Connect your computer to the router by cable, enter http://192.168.1.1.



STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Click admin.

USER LOGIN				
User Name: Password:	admin Login Reset			

STEP-3:

First, the **Easy Setup** page will turn up for basic and quick settings, choose one language, click **NEXT**.

Status	Easy Setup	Setup	Advanced	Service	Frewall	Maintenance	
		Easy Setup					
Easy Setup	_	Note: The whole	e page will be refre:	shed if the language	is modified.		
Easy Setup		Language Se	elect:	English	*		

STEP-4:

Choose your country and the ISP you cooperates, enter User Name, Password provided by your ISP,

click **NEXT**.

Country:	Vietnam
ISP:	VNPT Y
ISP Connectioin Type:	PPP0E 💟
Channel Mode:	LLC
VPI:	0
VCE	32
Username:	dfad@fvp.gd
Password:	1238847908
Connectioin Type:	Continuous

STEP-5:

By default, the SSID is TOTOLINK ND300, you can change it as you like. Then select **WPA2 Mixed** (Recommended) for **Encryption**. Enter password, click **APPLY** to make all settings work.

Easy Setup2 Wireless Setting & Security				
Broadcast SSID:	Enable Obisable			
SSID:	TOTOLINK ND300			
Encryption:	WPA2 Mixed V			
Authentication Type:	Personal (Pre-Shared Key) 💌			
Pre-Shared Key:	asdfadfadfasdf (8~63 ASCII characters or 64 hexadecimal characters)			
PREV				