

## A2004NS repeater setting

 
It is suitable for: **A1004, A2004NS, A5004NS, A6004NS**

### Application:

Solution about how to set repeater mode on TOTOLINK products.

### STEP-1: Connect your computer to the router

1-1. Connect your computer to the router by cable or wireless, then login the router by entering <http://192.168.1.1> into the address bar of your browser.



#### Note:


The default access address varies depending on the actual situation. Please find it on the bottom label of the product.



1-2. Please click Setup Tool to enter the router's setting interface.




1-3. Please login to the Web Setup interface (the default user name and password is admin).

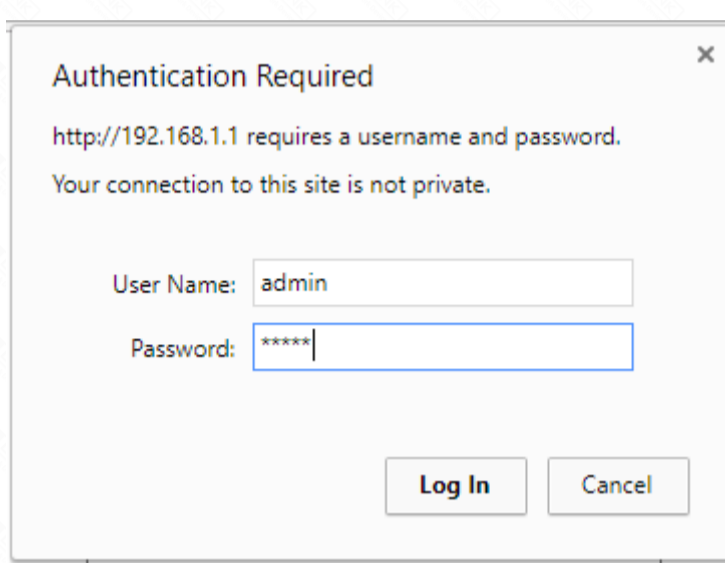


### STEP-2: Wireless(2.4GHz) repeater setting

Please go to **Advance Setup -> Wireless(2.4GHz)-> Wireless Multibridge**, and check which you have selected.

Select **Use Wireless Bridge and WPAPSK/WPA2PSK+TKIP/AES in Encryption**, then Click **AP Scan**.

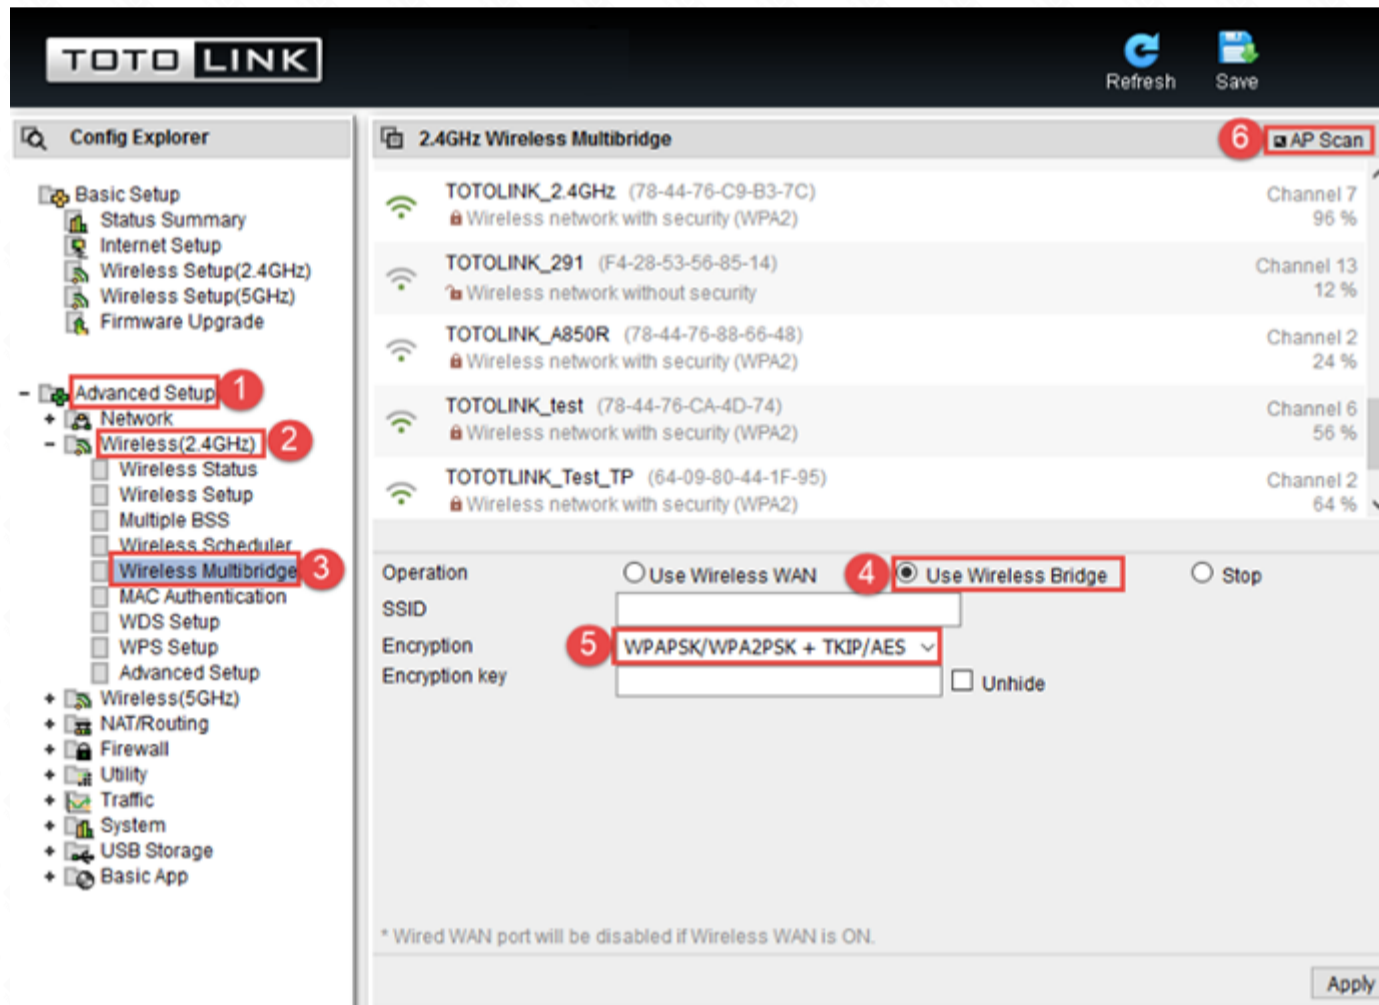


Then select the **host router's SSID** and way of **Encryption**, then input password of the **host router's SSID** and Click **Apply**.

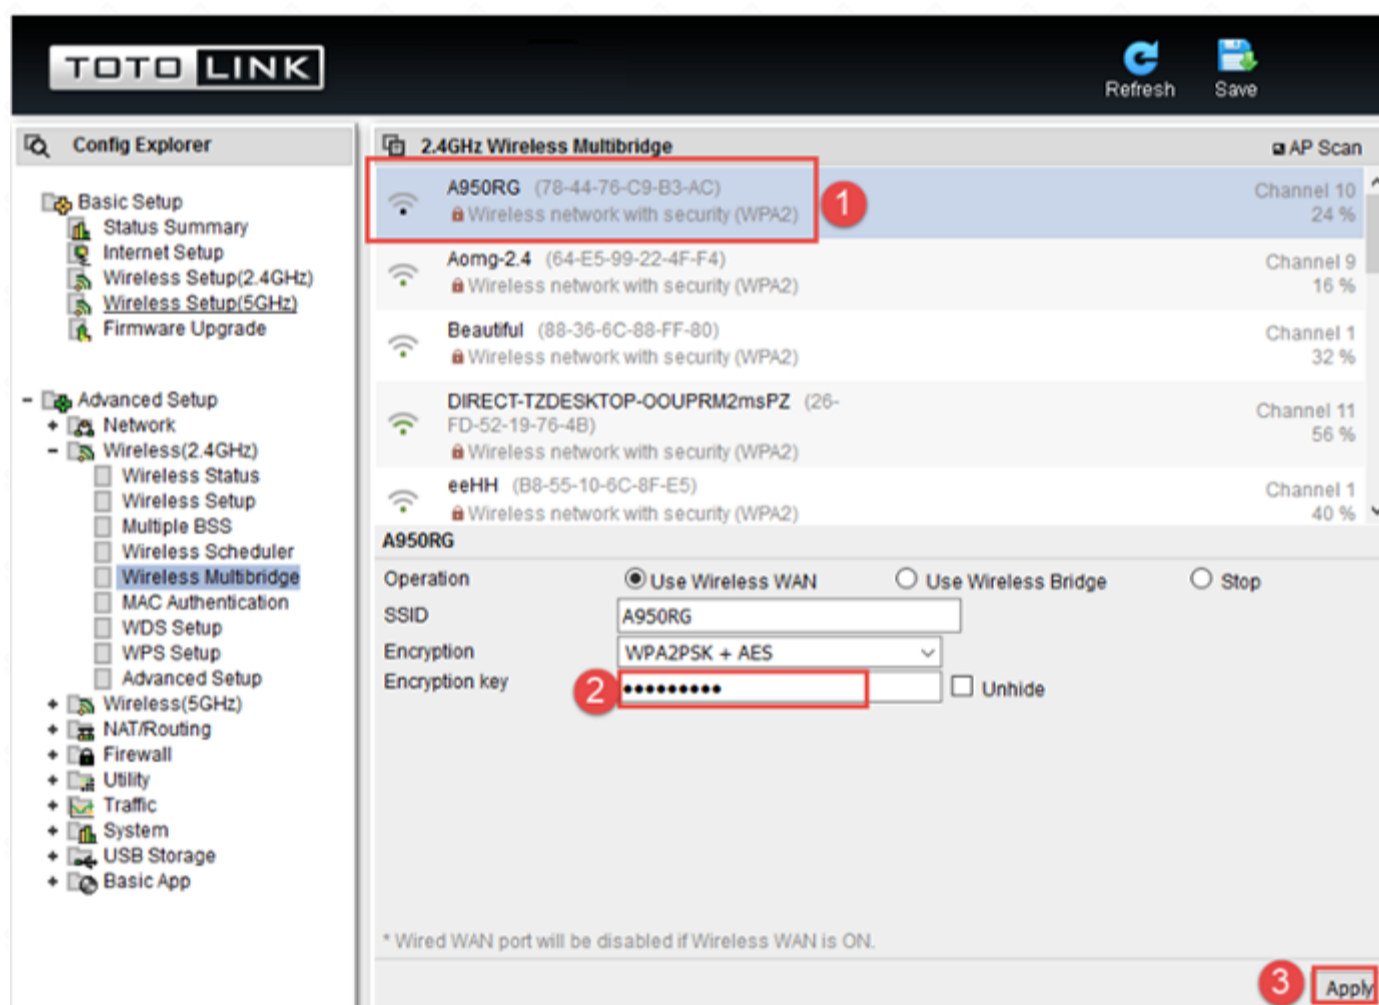


### STEP-2: Wireless(5GHz) repeater setting

Please go to **Advance Setup -> Wireless(5GHz)-> Wireless Multibridge**, and check which you have selected.

Select **Use Wireless Bridge and WPAPSK/WPA2PSK+TKIP/AES in Encryption**, then Click **AP Scan**.

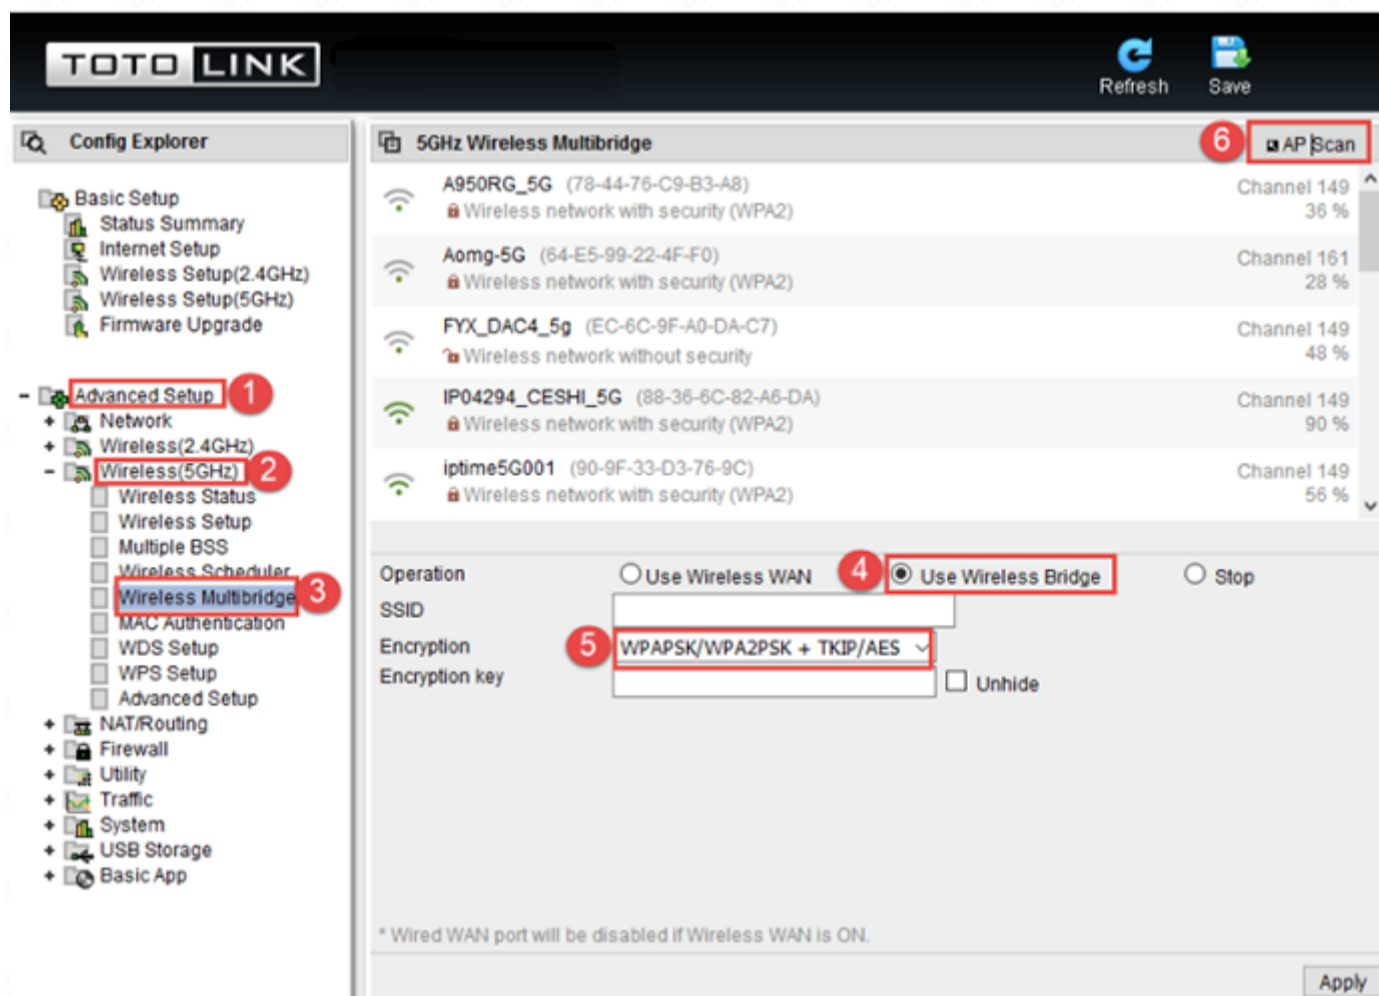

Then select the **host router's SSID** and way of **Encryption**, then input password of the **host router's SSID** and Click **Apply**.

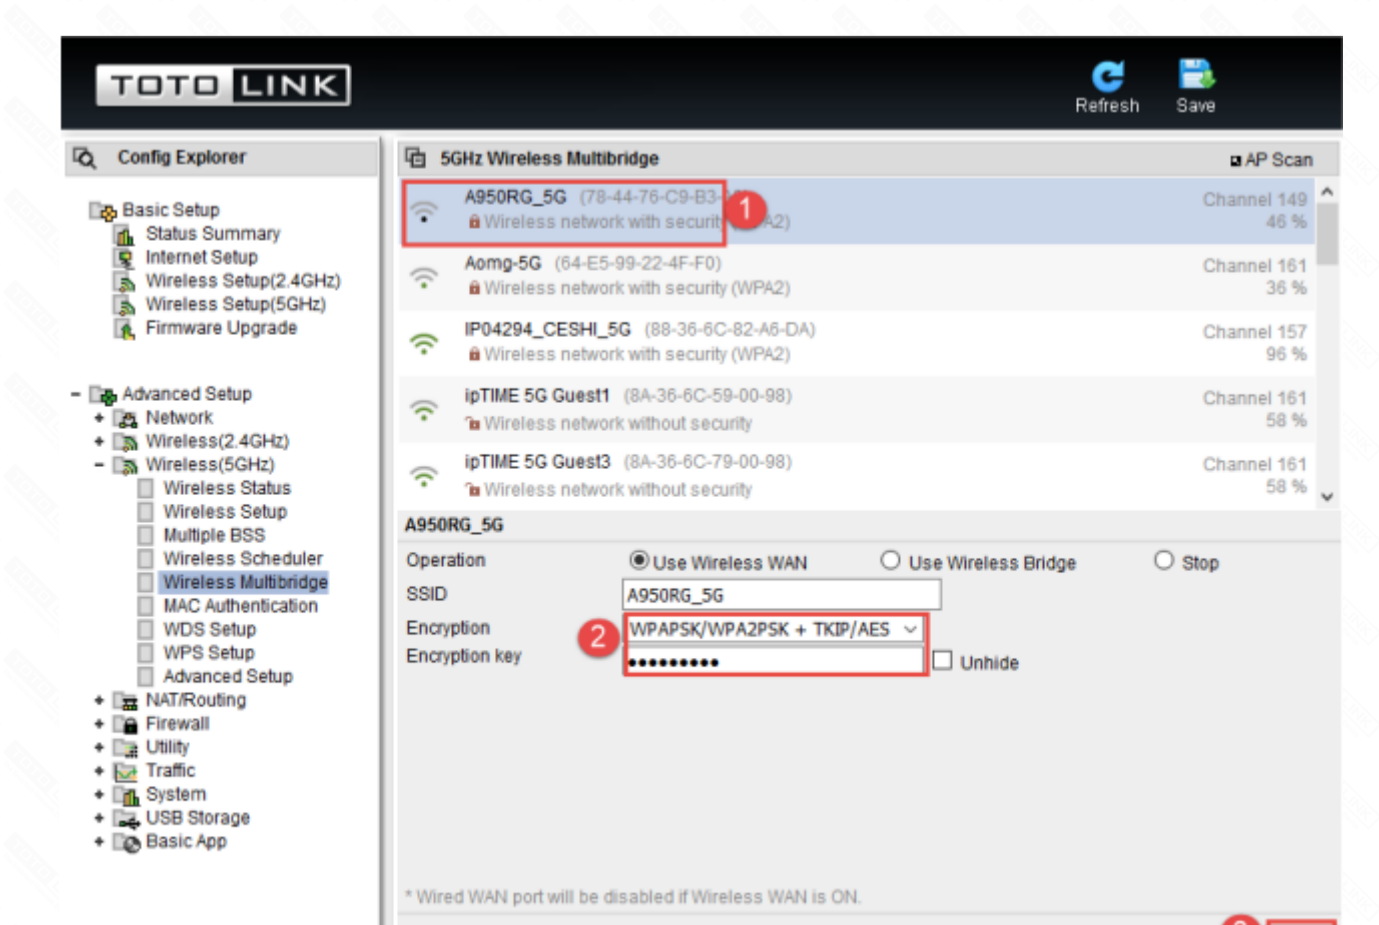

PS: After completing the above operation, please re-connect your SSID after 1 minute or so. if the Internet is available it means that the settings are successful.

Otherwise, please re-set the settings again