

# How to Log into N100RE & N200RE's New User Interface

It is suitable for : **N100RE, N150RT, N200RE, N210RE, N300RT, N302R Plus, A3002RU**

**Application introduction:** Password can ensure the security of your wireless network. In case you forget the Password, follow steps below to restore it.

**Take N200RE-V3 as an example.**

**STEP-1:**

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




**Note:**

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

**STEP-2:**


User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

## USER LOGIN

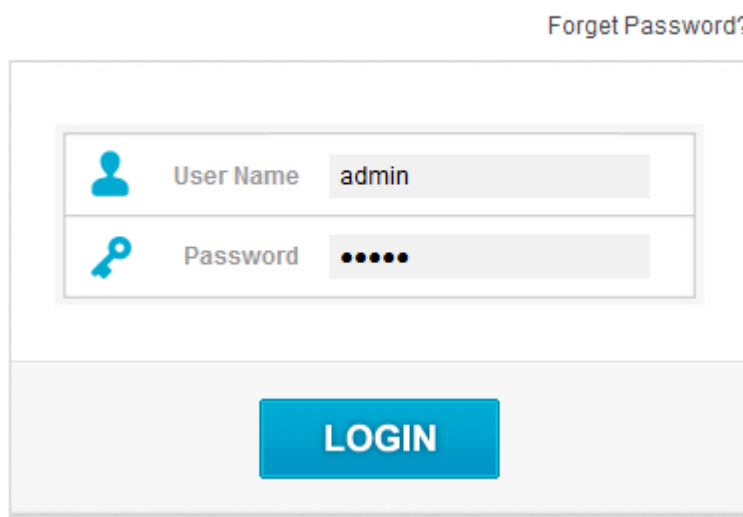

**STEP-3:**

Then the **Easy Setup** page will turn up for basic and quick settings, click **Advanced Setup**.

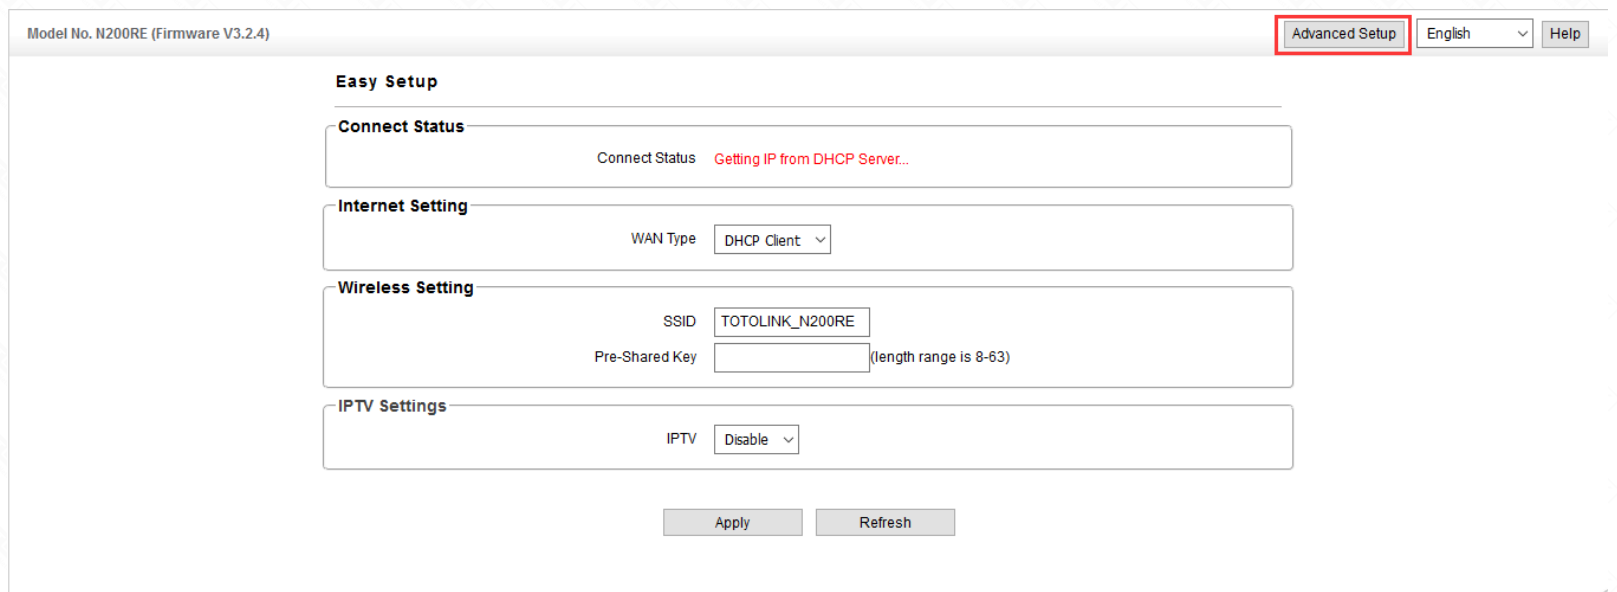


**STEP-4:**

Click **Wireless > Basic Settings** on the left navigation bar.



**STEP-5:**

**Enable** Wireless function. Then input the new SSID, set a password for it and click **Apply**.

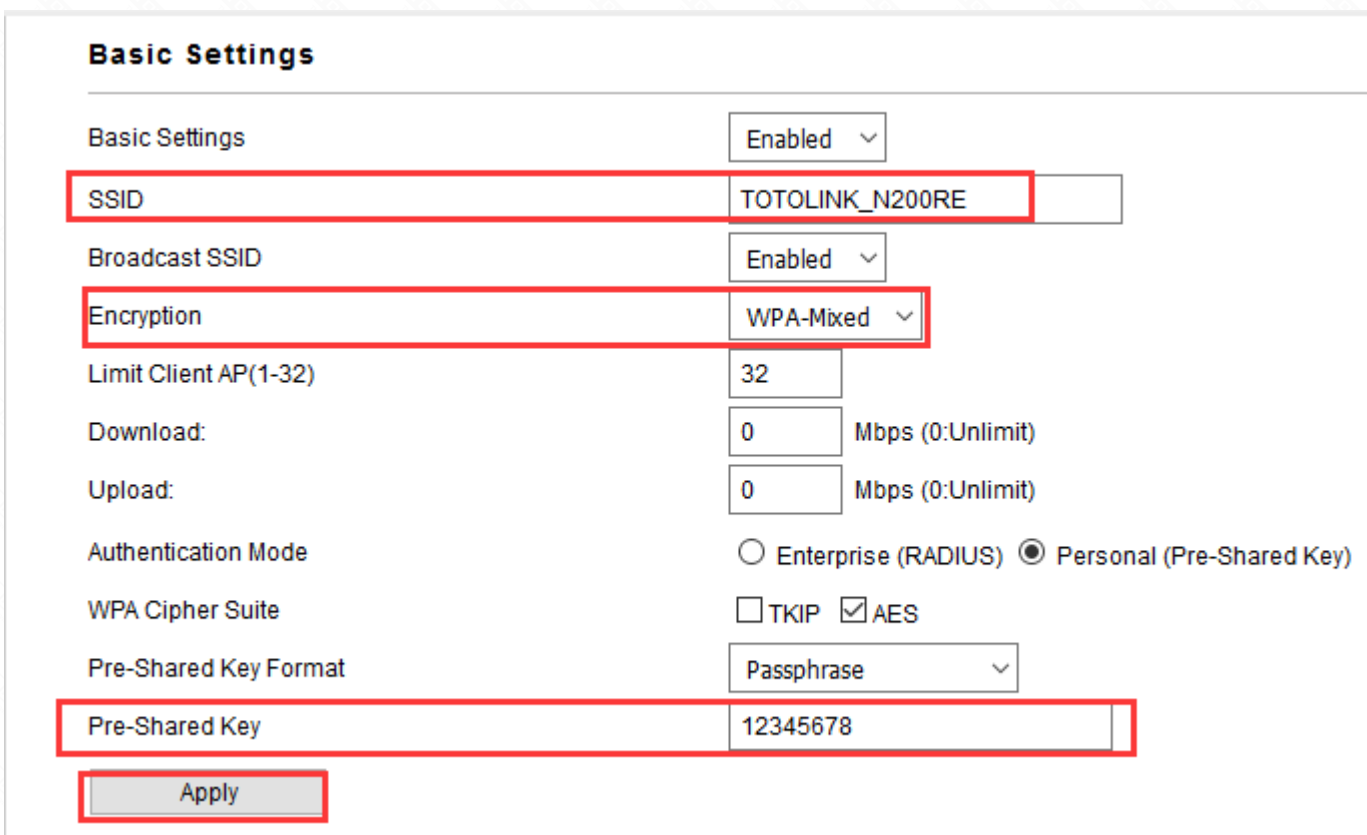

**STEP-6:**

After changing the SSID, you have to re-search for the new SSID and enter right password to connect the Router.