

A3002RU FTP server instal

It is suitable for : **A3002RU**

Application introduction:

File server can be build quickly and easily via the USB port applications so that file upload and download can be more flexible. This guide introduces how to configure FTP service via the router.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.




Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:


User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

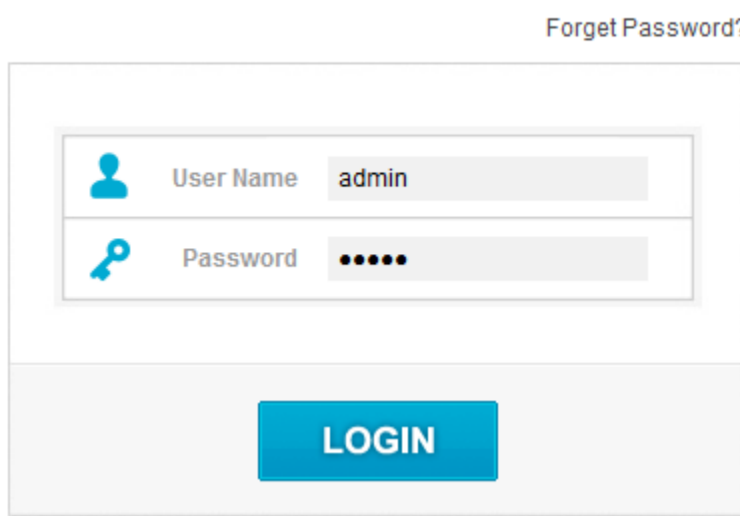


STEP-3:

Set the FTP server account password.

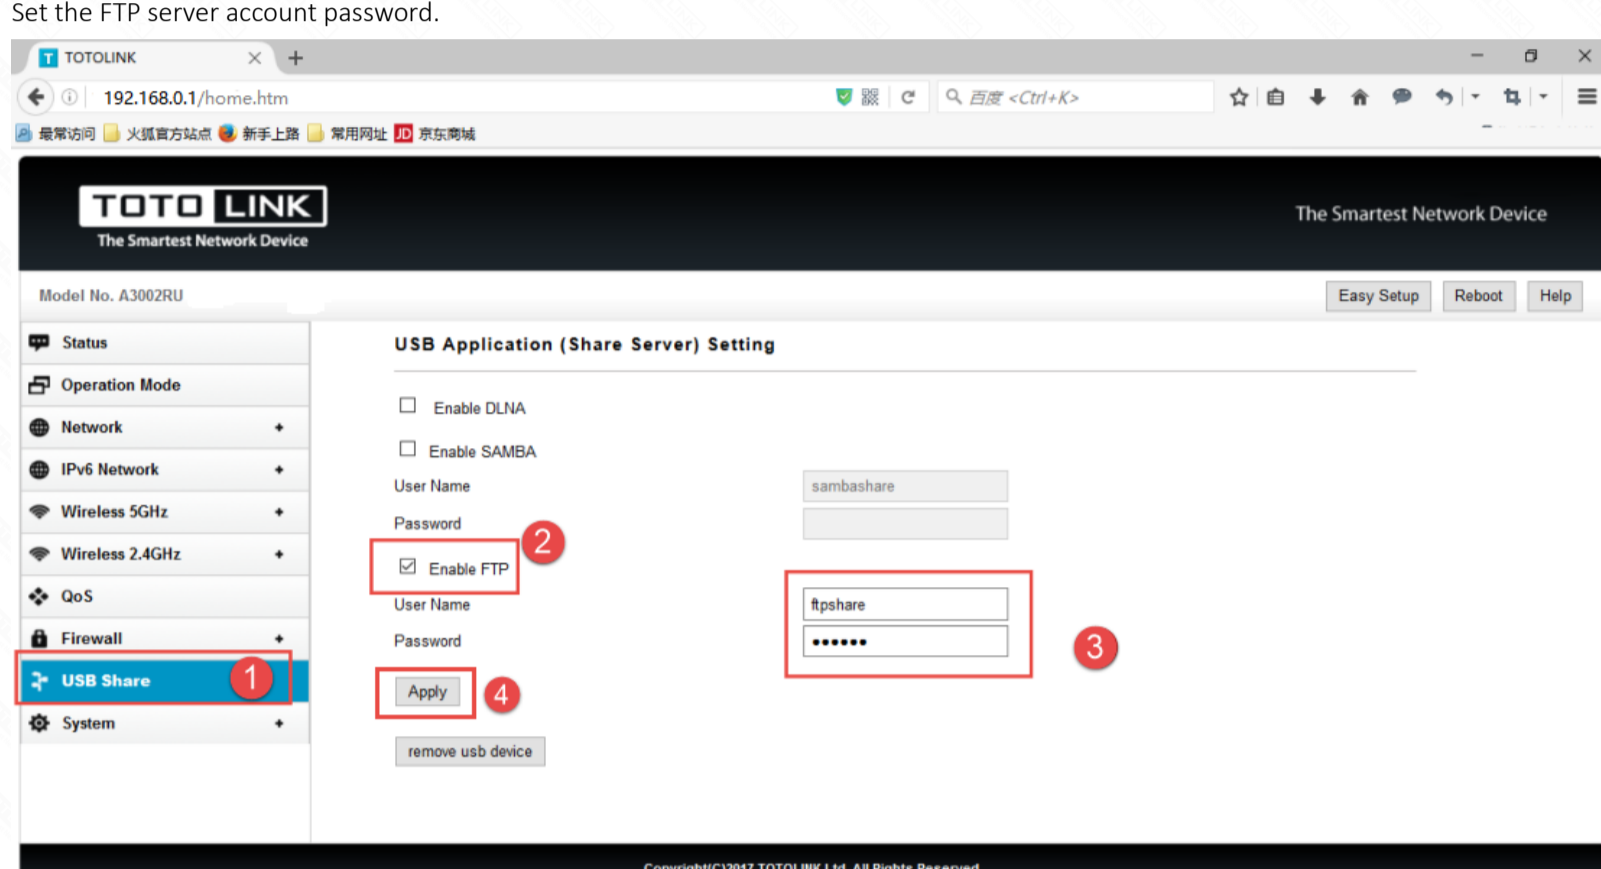


STEP-4: Access the FTP server by local network


4-1. Please open the web browser and type in address **ftp://LAN IP**, press enter. Here the IP address of the router is **192.168.0.1**.

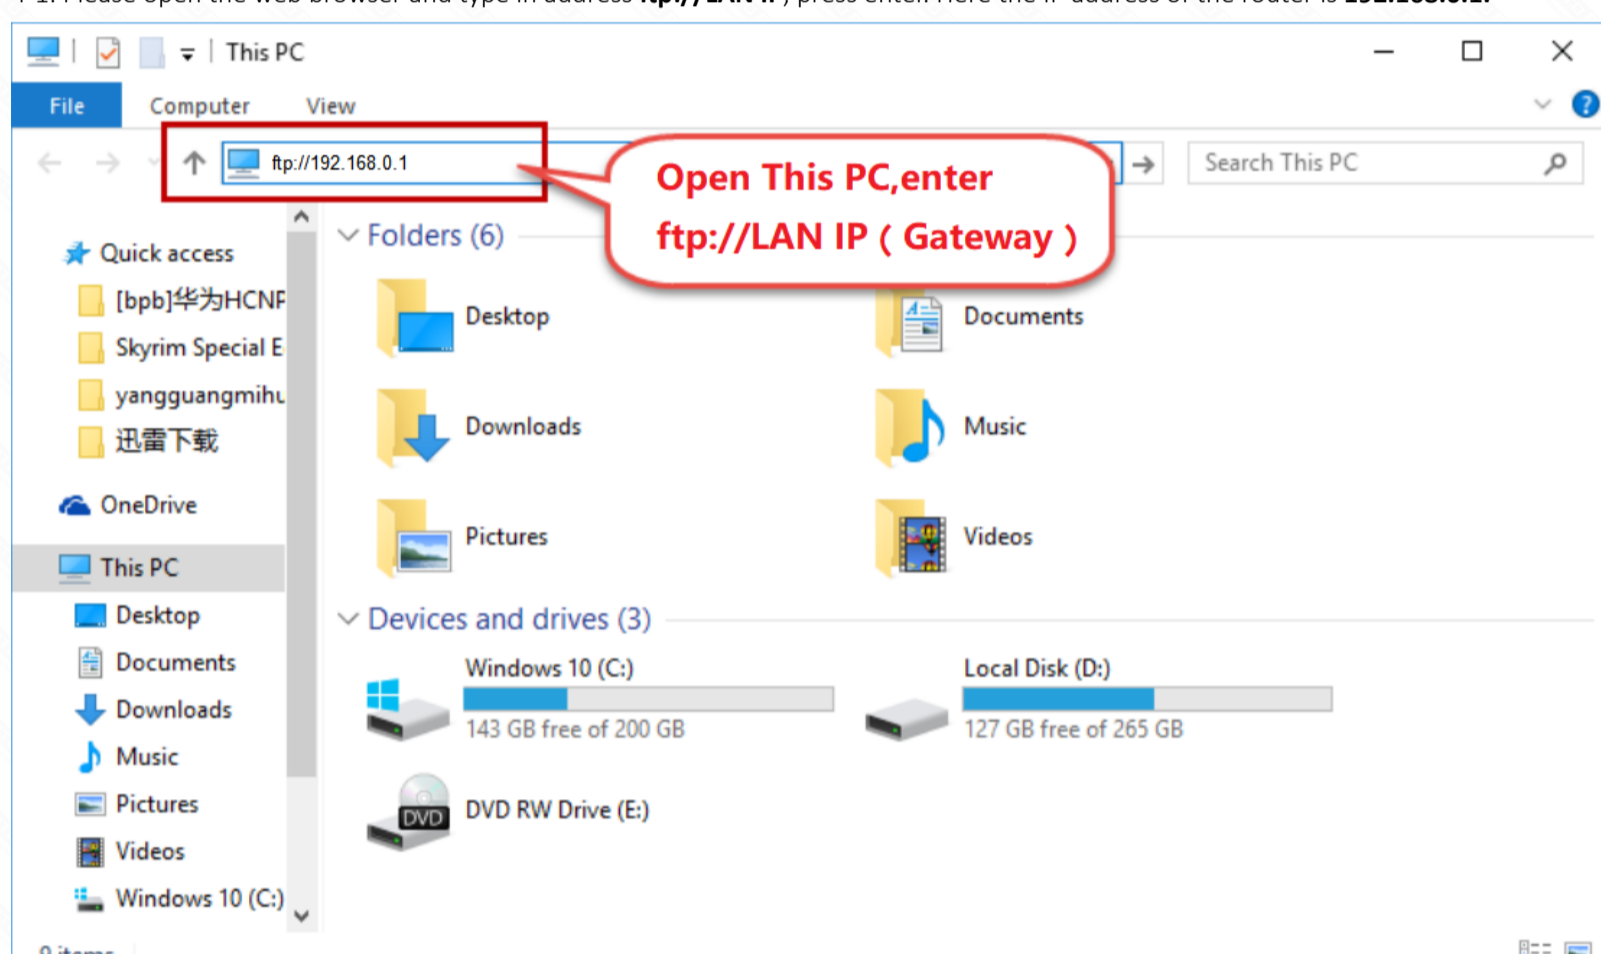

4-2. Enter the User name and password that you have set before, and then click Log On.

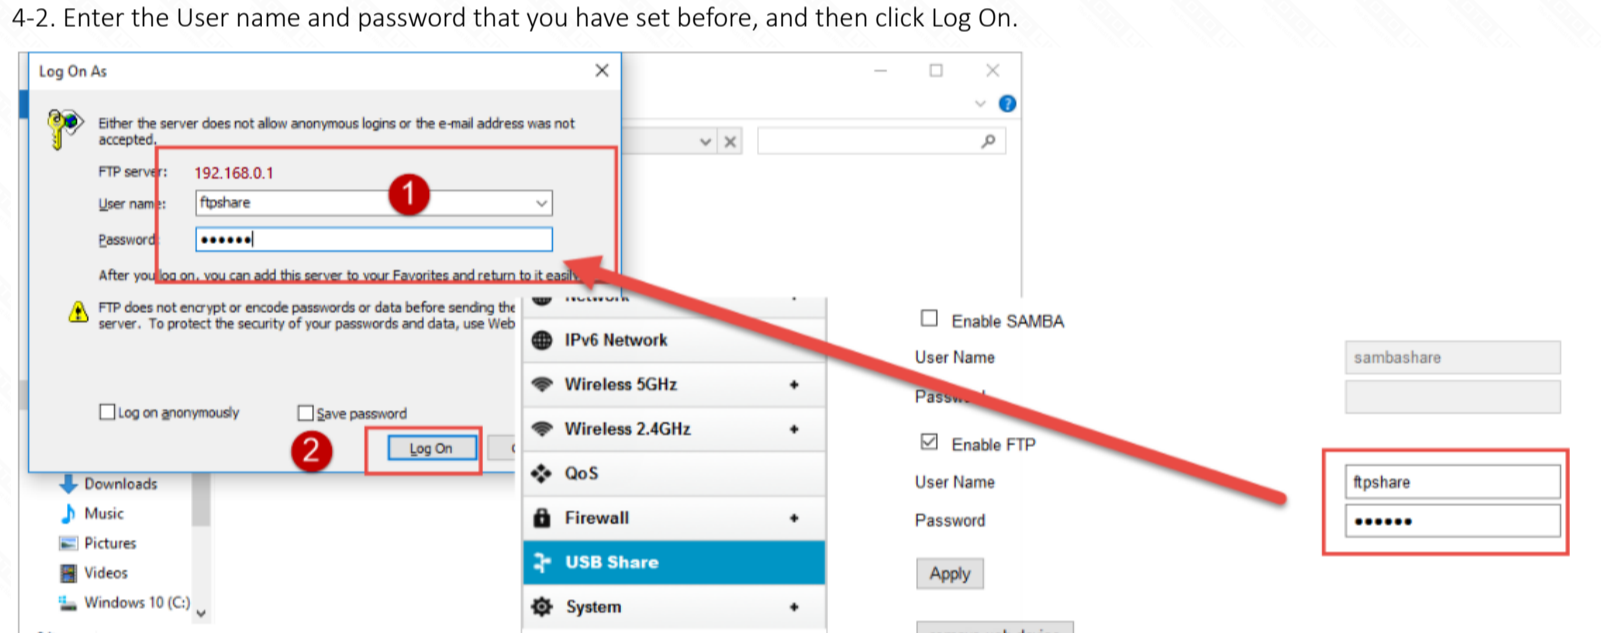


4-3. You can visit the data in the USB device now.

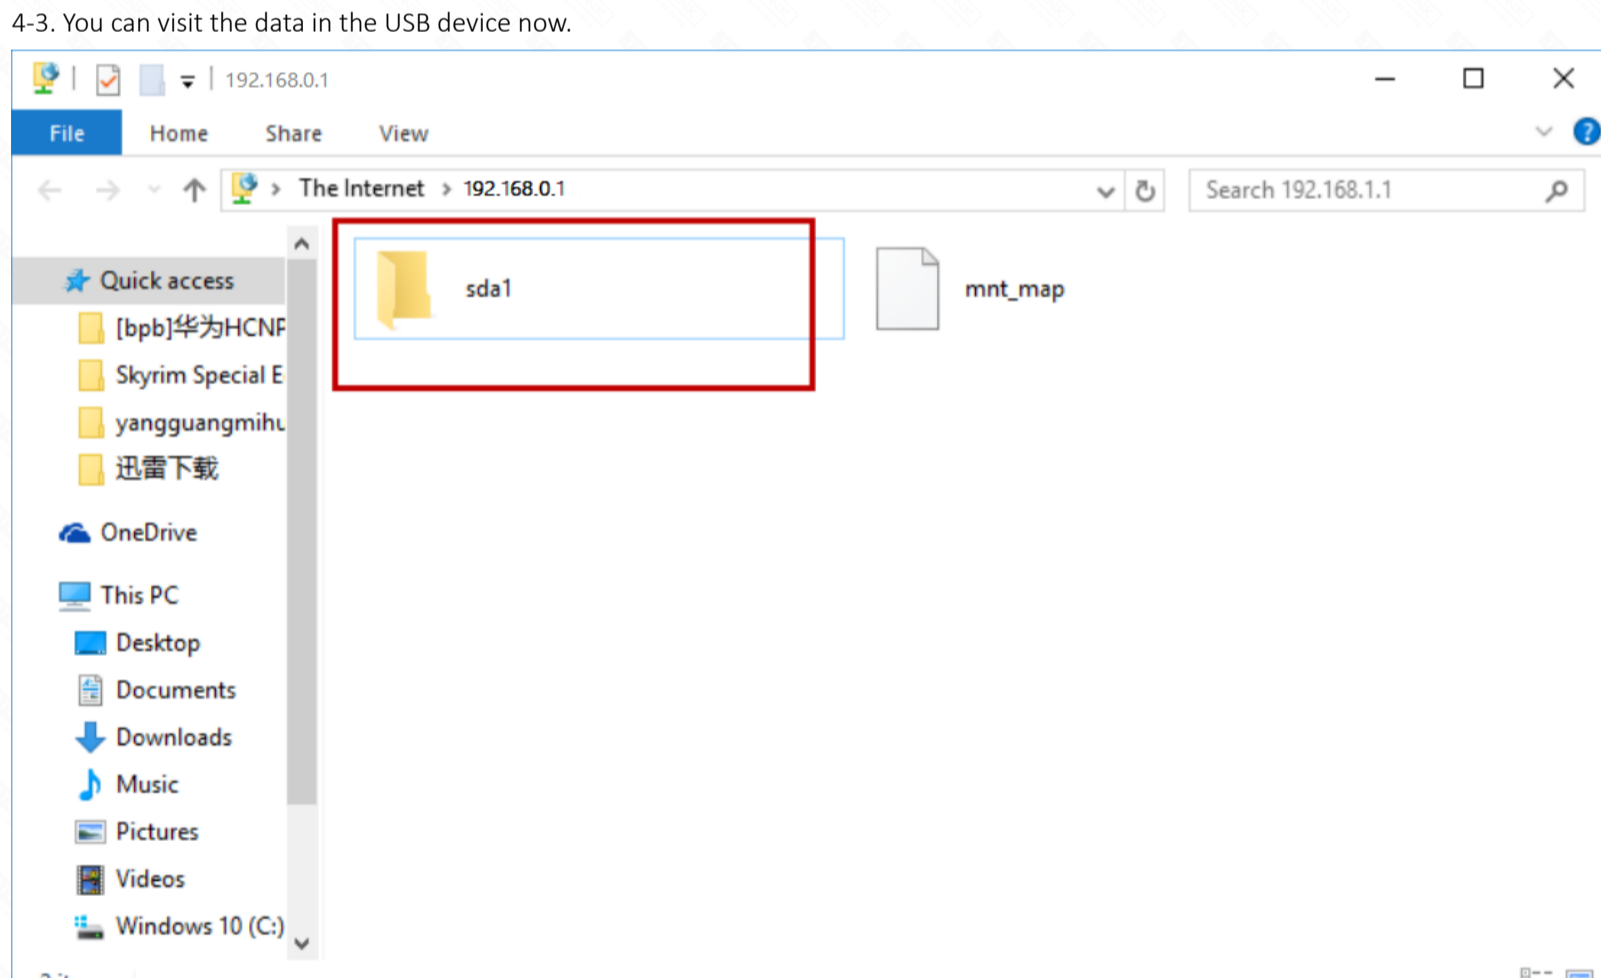


STEP-5: Access the FTP server by external network.

5-1. You can also access the FTP server by external network. Please type in address **ftp://wan IP** to access to it.


Here the WAN IP of the router is **10.8.0.19**.

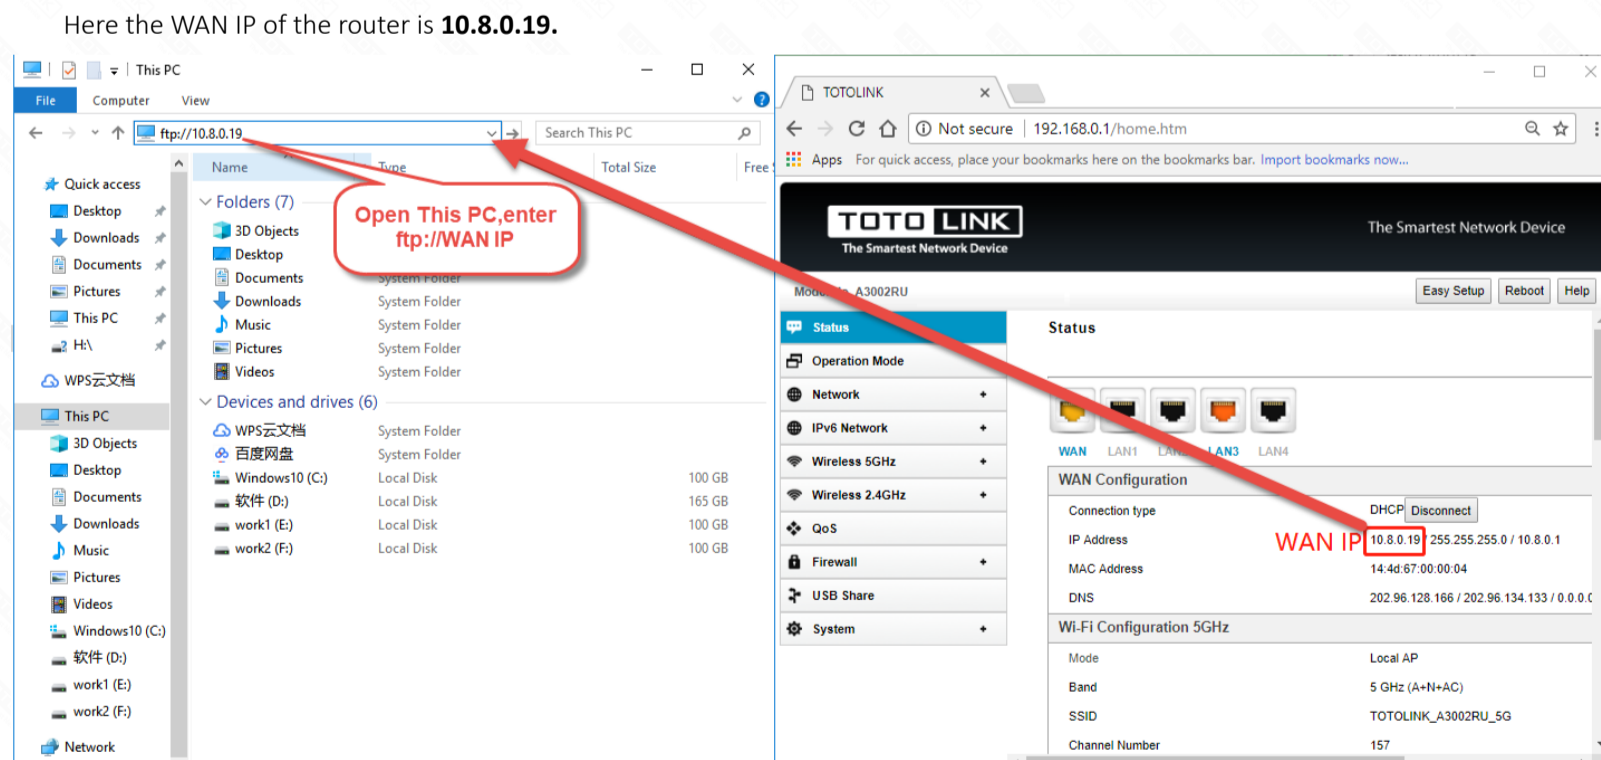

5-2. Enter the User name and password that you have set before, and then click Log On.

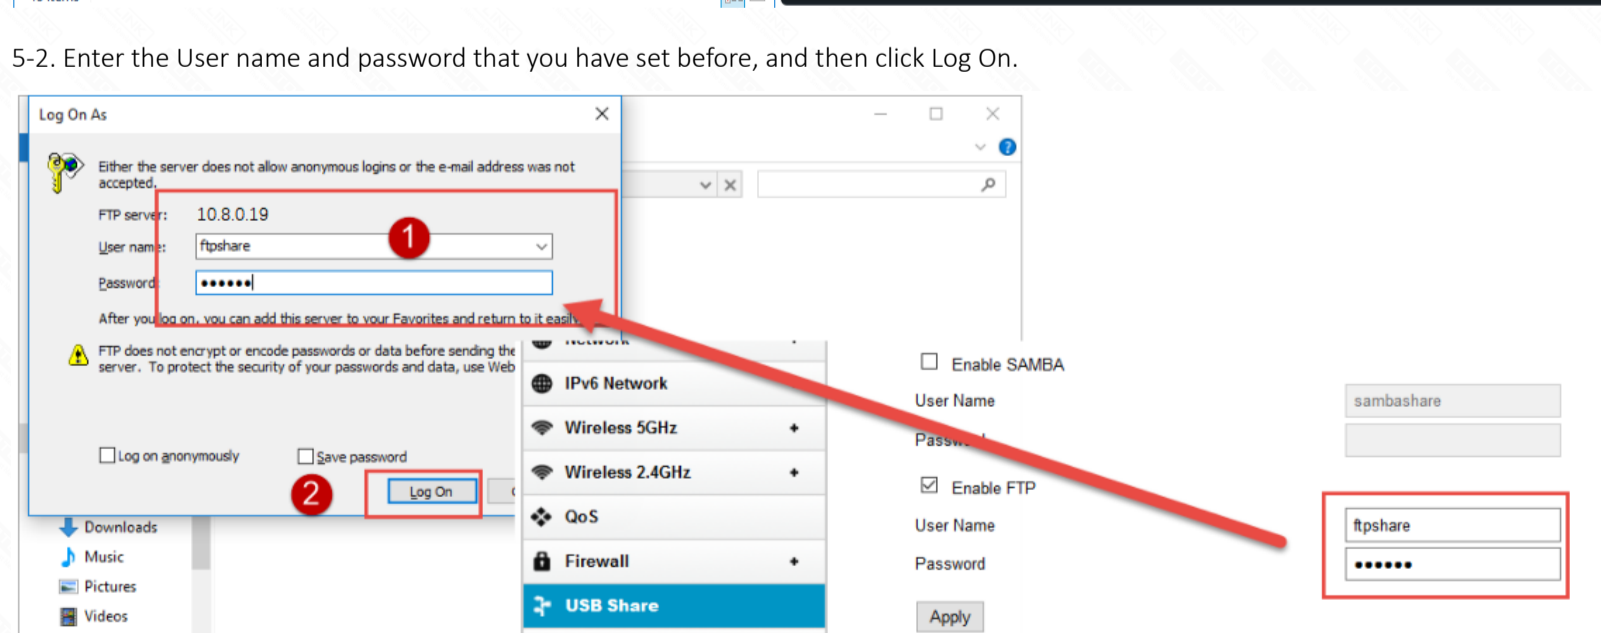

5-3. You can visit the data in the USB device now.

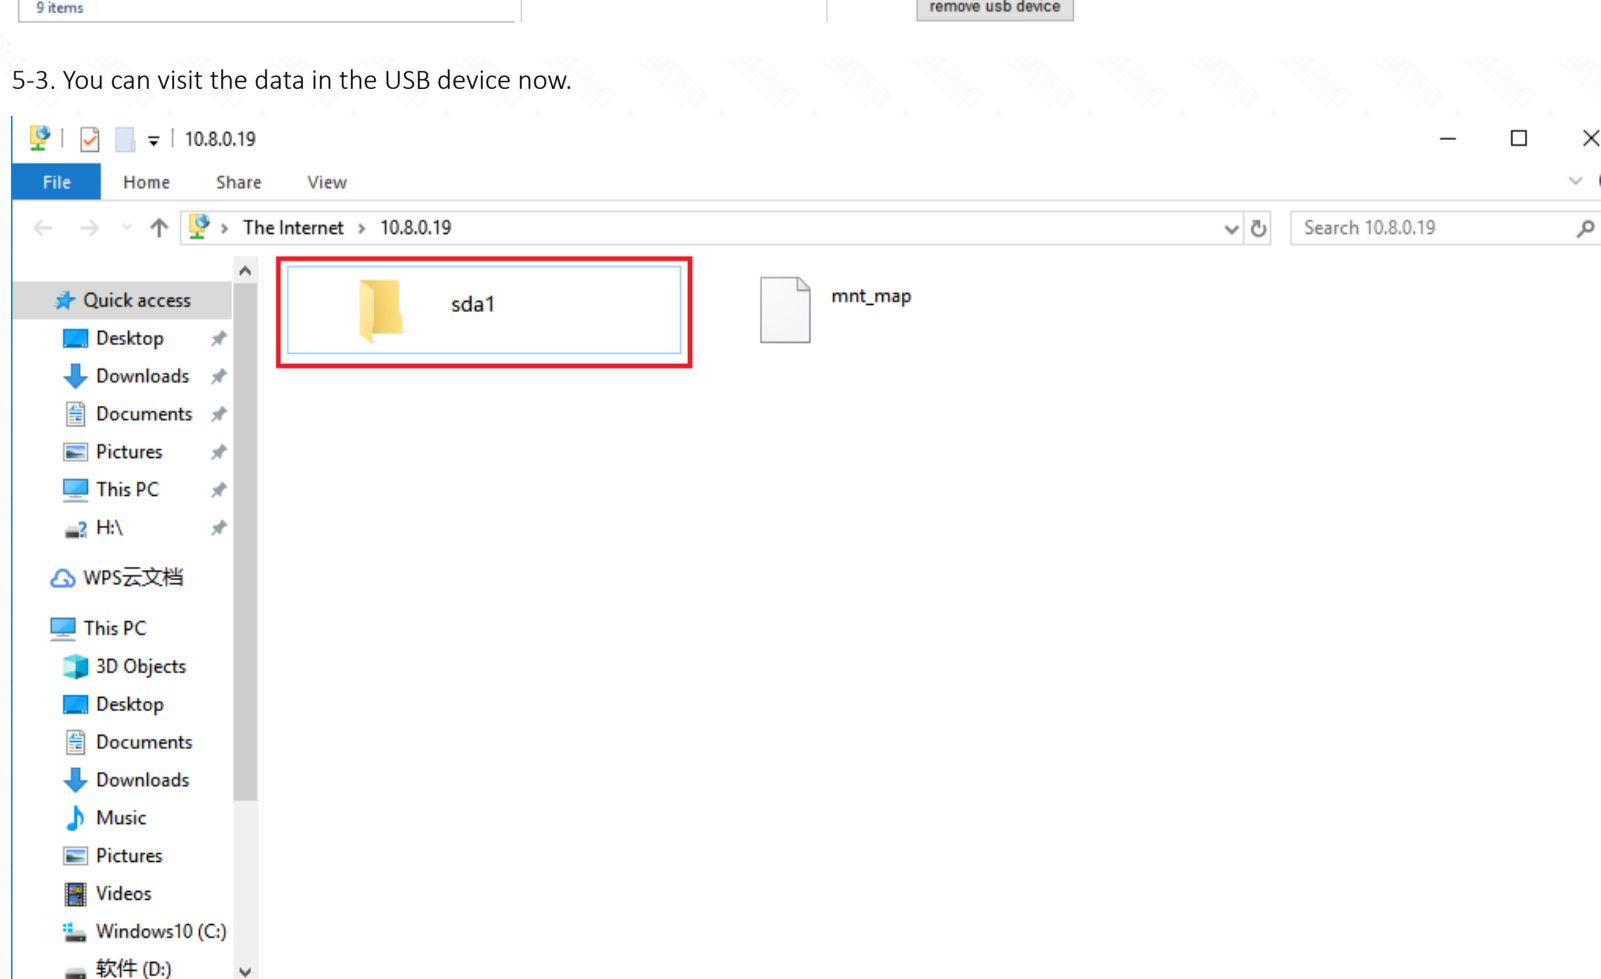

Notes:

If the FTP server can't take effect immediately, please wait a few minutes. Or restart the service by clicking stop/start button.