\rightarrow




A950RG A3000RU WDS Settings

It is suitable for: A800R, A810R, A3100R, A950RG, A3000RU

Application introduction:

Settings Solution about how to configure WDS to TOTOLINK products. Take the A3000RU as the example of setting 2.4G wireless.

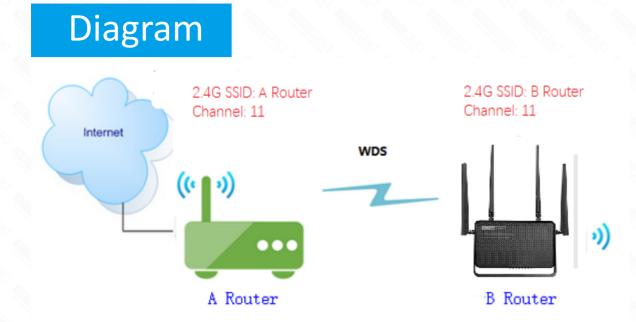

Preparation

- ★ Before configuration, make sure that both A Router and B Router are powered on.
- ★ Connect your computer to the same network of router A and B.
- move the B router closer to the A router to find the B routing signals better for fast WDS.
- ★ A Router and Router should be set to the same channel.

 ★ Set both Pouter A and B should to the same hand 2.4G of
- ★ Set both Router A and B should to the same band 2.4G or 5G.
- ★ Choose the same models for A-router and B-router. If not, WDS function may not be implemented

Set up steps

STEP-1

into the address bar of your browser.

Q 192.168.0.1

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.


Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1



STEP-2:

User Name and Password are required, by default both are admin in lowercase letter. Click LOGIN.

USER LOGIN

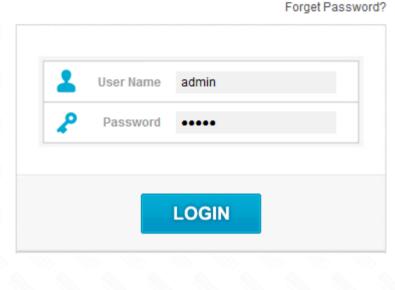


3-1. Firstly connect the Internet for A-router then please go to **Wireless 2.4GHz->WDS Settings** page, and check which you have selected. (The type of A-router and B-router should be same.)

STEP-3: A-router setting

(The type of A-router and B-router should be same)
Select **Enable**, then Input **MAC Address** of B-router in A-router. Click **Add.**

A3000RU (Firmware V5.9c.680)


System Status

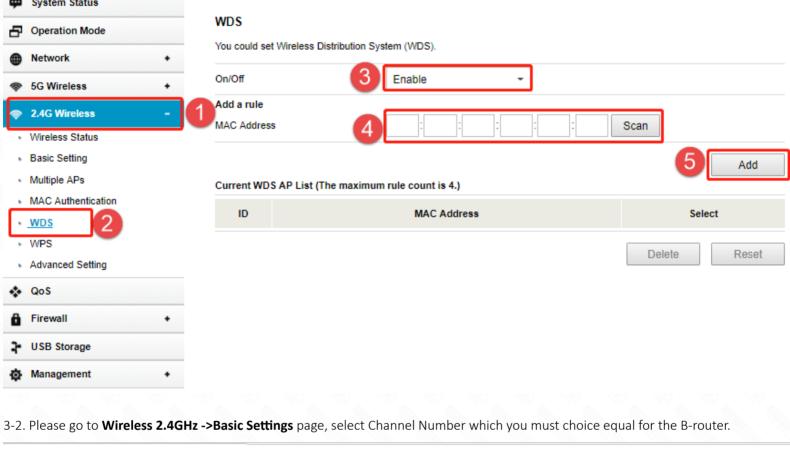

System Status

Basic Setting

You could configure the minimum number of wireless settings for communication, such as SSID and Channel. The de-

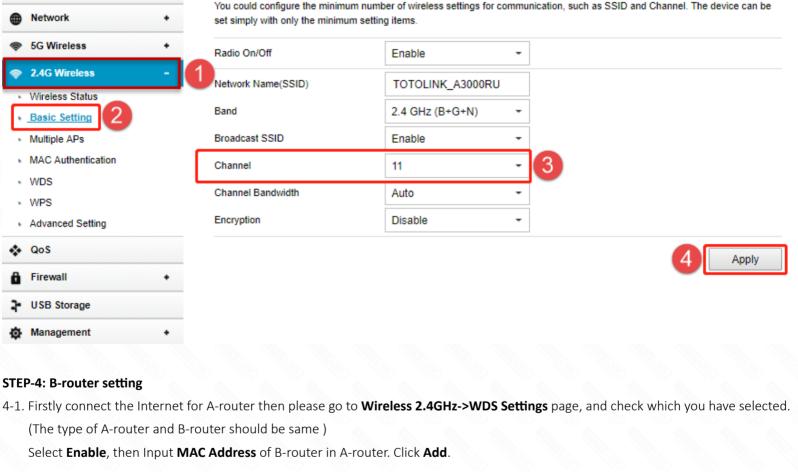

Select **Enable**, ther

A3000RU (Firmware V5.9c.680)

A3000RU (Firmware V5.9c.680)

System Status

Operation Mode

WDS

You could set Wireless Distribution System (WDS).

