

N300RT repeater settings

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT , N300RH, N302R Plus**

Application introduction:

Solution about how to set repeater mode on TOTOLINK products.

Settings

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

Forget Password?

👤

User Name


🔑

Password

LOGIN


STEP-3:

Please go to **Operation Mode ->Repeater (Extender)**, then Click **Apply/Next**. then Click **Apply**.

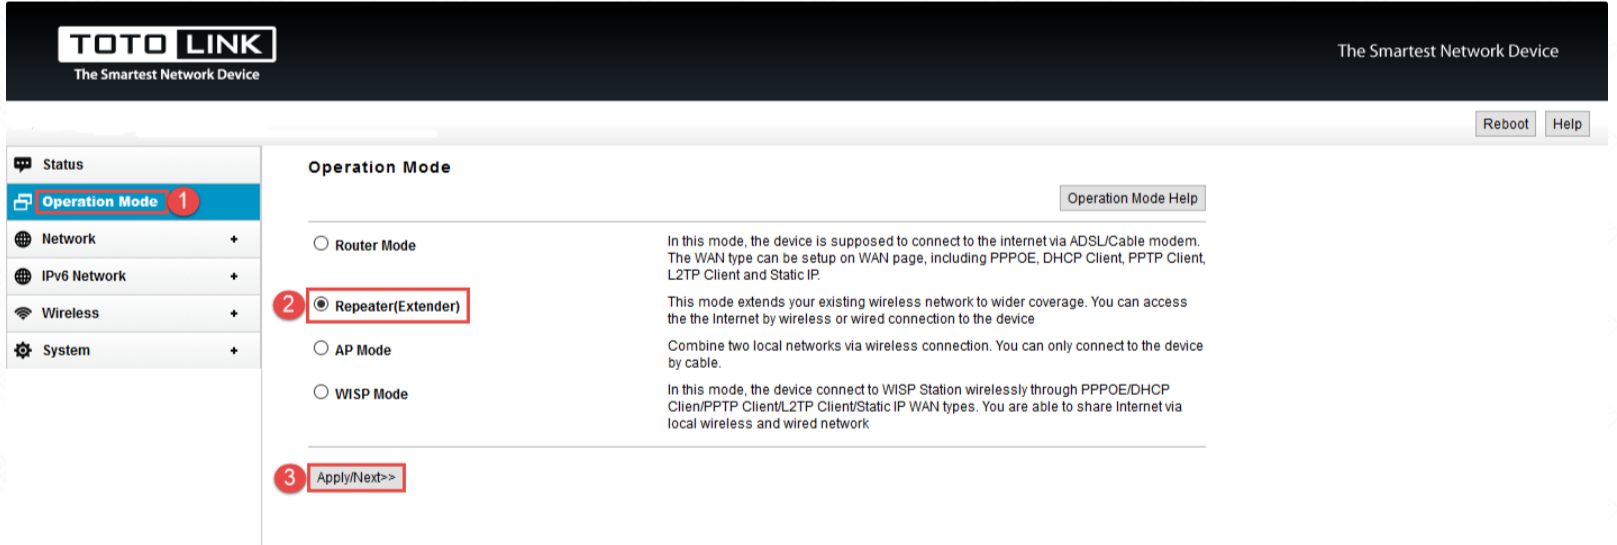

STEP-4:

Firstly select **Scan**, then select **host router's SSID** and input **Password** of the **host router's SSID**, then select **Change SSID and Password** to input **SSID** and **Passsword** you want to fill in,then Click **Connect**.

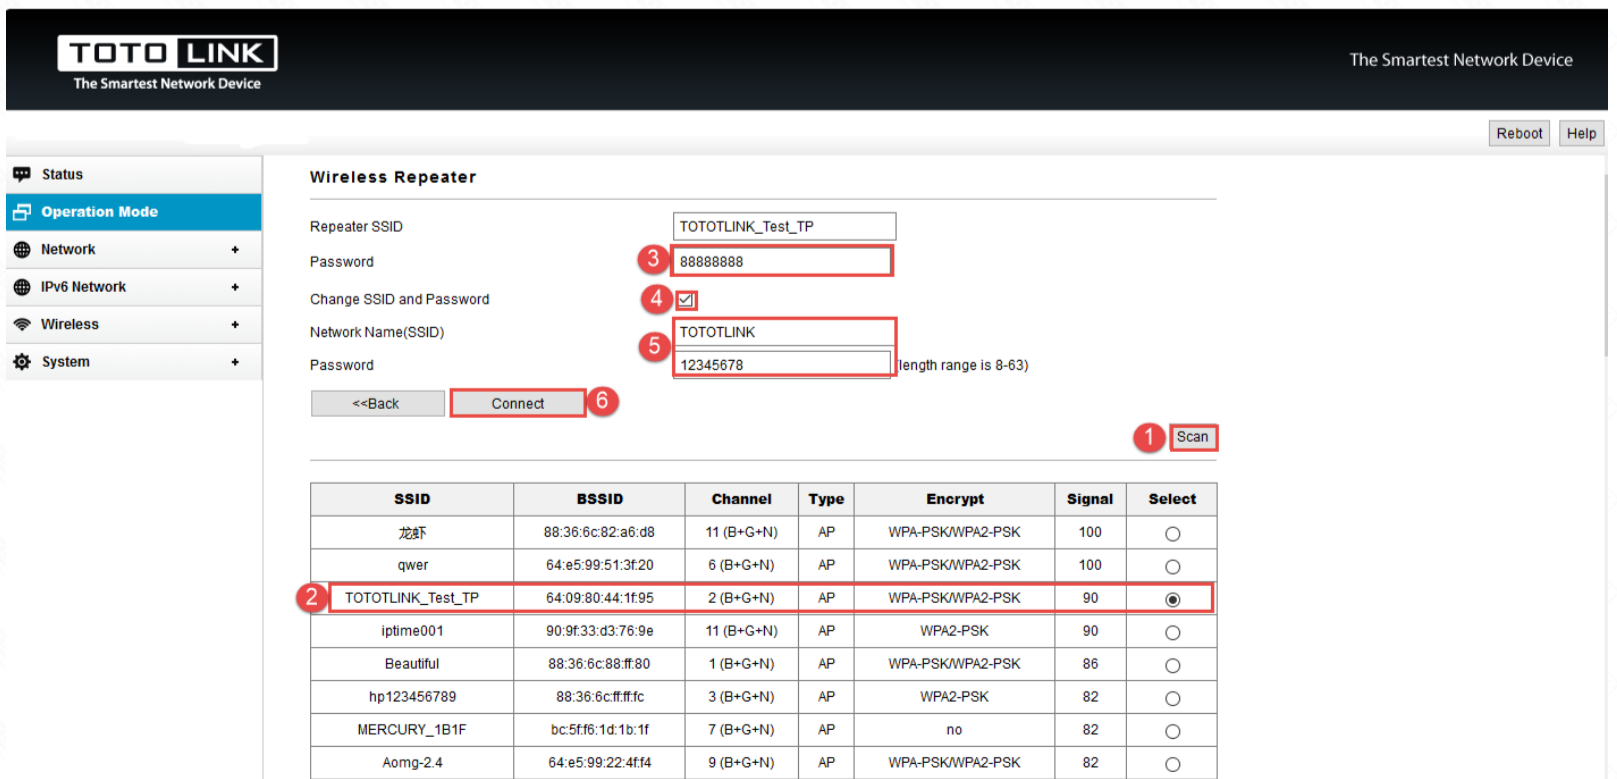

PS:

After completing the above operation, please re-connect your SSID after 1 minute or so.if the Internet is available it means that the settings are successful. Otherwise, please re-set the settings again.