

N600R repeater settings

It is suitable for : **N600R**

Application introduction:

Solution about how to set repeater mode on TOTOLINK products.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

Forget Password?

STEP-3:

You need to enter the settings page, then follow the steps illustrated.

- ① Change SSID and Password->
- ② Click the **Apply** button

STEP-4:

Please go to **Operation Mode -> Repeater Mode**, then Click **Apply**.

STEP-5:

Please go to **Wireless -> Repeater Setting** page, and check which you have select.

Select **Scan** and **WIFI**, then Input **Key** of the **host router's SSID**, then Click **Connect**.

Channel	Network Name (SSID)	MAC Address	Encryption	Signal	Mode
2	Dreadnaught	64:E5:99:F5:1C:E0	WPA2-PSK	100%	(B+G+N)
11	TOTOLINK_Emily_2G	F4:28:53:F6:53:54	WPA/WPA2-PSK	100%	(B+G+N)
1	TOTOLINK_TEST	F4:28:53:D9:66:F4	WPA/WPA2-PSK	100%	(B+G+N)
6	农药	F4:28:53:19:22:8A	WPA/WPA2-PSK	100%	(B+G+N)
11	TOTOLINK_N300RT	14:4D:67:00:00:03	Disable	100%	(B+G+N)
11	TOTOLINK_A810R	F4:28:54:07:A9:B8	Disable	96%	(B+G+N)
11	TOTOLINK_T10	F4:28:53:C0:A1:3C	WPA/WPA2-PSK	88%	(B+G+N)
11	TOTOLINK_T10	F4:28:53:C0:A1:34	WPA/WPA2-PSK	80%	(B+G+N)
12	wifi MT 2.4G	F4:28:53:19:55:45	WPA/WPA2-PSK	76%	(B+G+N)

PS: After completing the above operation, please re-connect your SSID after 1 minute or so. If the Internet is available it means that the settings are successful. Otherwise, please re-set the settings again