

A3002RU QoS settings

It is suitable for : **N100RE, N150RT, N200RE, N210RE, N300RT, N302R Plus, A3002RU**

Application introduction:

Solution about how to configure QoS on TOTOLINK products.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:

The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.


USER LOGIN

[Forget Password?](#)

STEP-3: IPV4 QoS setting

Please go to **QoS** page, and check which you have selected. Select **Enable** and fill in **Manual Uplink/Downlink Speed**, then click **IPv4** bottom .

You can fill in **IP Address** and **Total Uplink Bandwidth** and **Total Downlink Bandwidth** you want to restrain, then Click **Apply**.

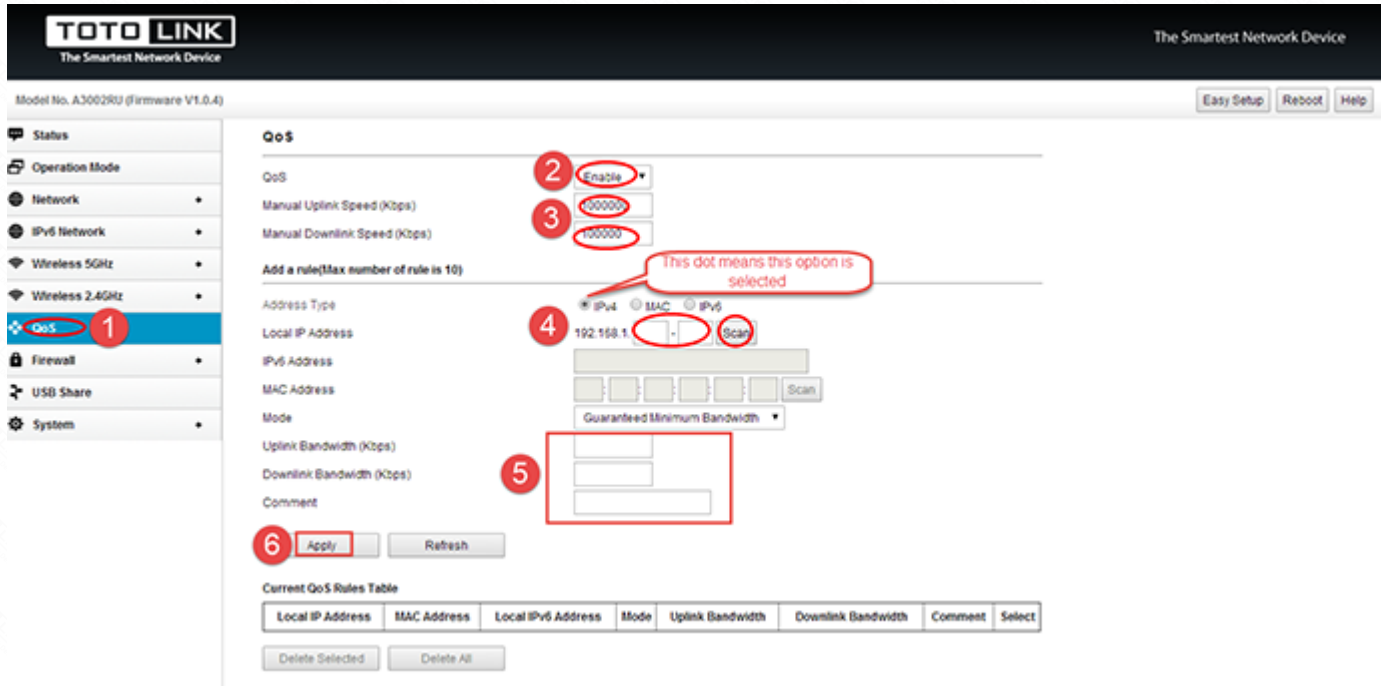

STEP-4: IPV6 QoS setting

Please go to **QoS** page, and check which you have selected. Select **Enable** and fill in **Manual Uplink/Downlink Speed**, then click **IPv4** bottom .

You can fill in **IP Address** and **Total Uplink Bandwidth** and **Total Downlink Bandwidth** you want to restrain, then Click **Apply**.

