

N300RT(N100RE N200RE N150RT N151RT N301RT N302R Plus N302RE)Wireless SSID password settings

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N301RT , N300RH, N302R Plus**

Application introduction:

The Wireless SSID and password are the basic information for you to connect Wi-Fi network. But sometimes you may forget or want to change them regularly, so here we will guide you how to check or modify the wireless SSID and password.


Settings

STEP-1: Enter the setup interface

Open a browser, enter **192.168.0.1**. Input User Name and password (default **admin/admin**) on login management interface, as follows:

Note:


The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

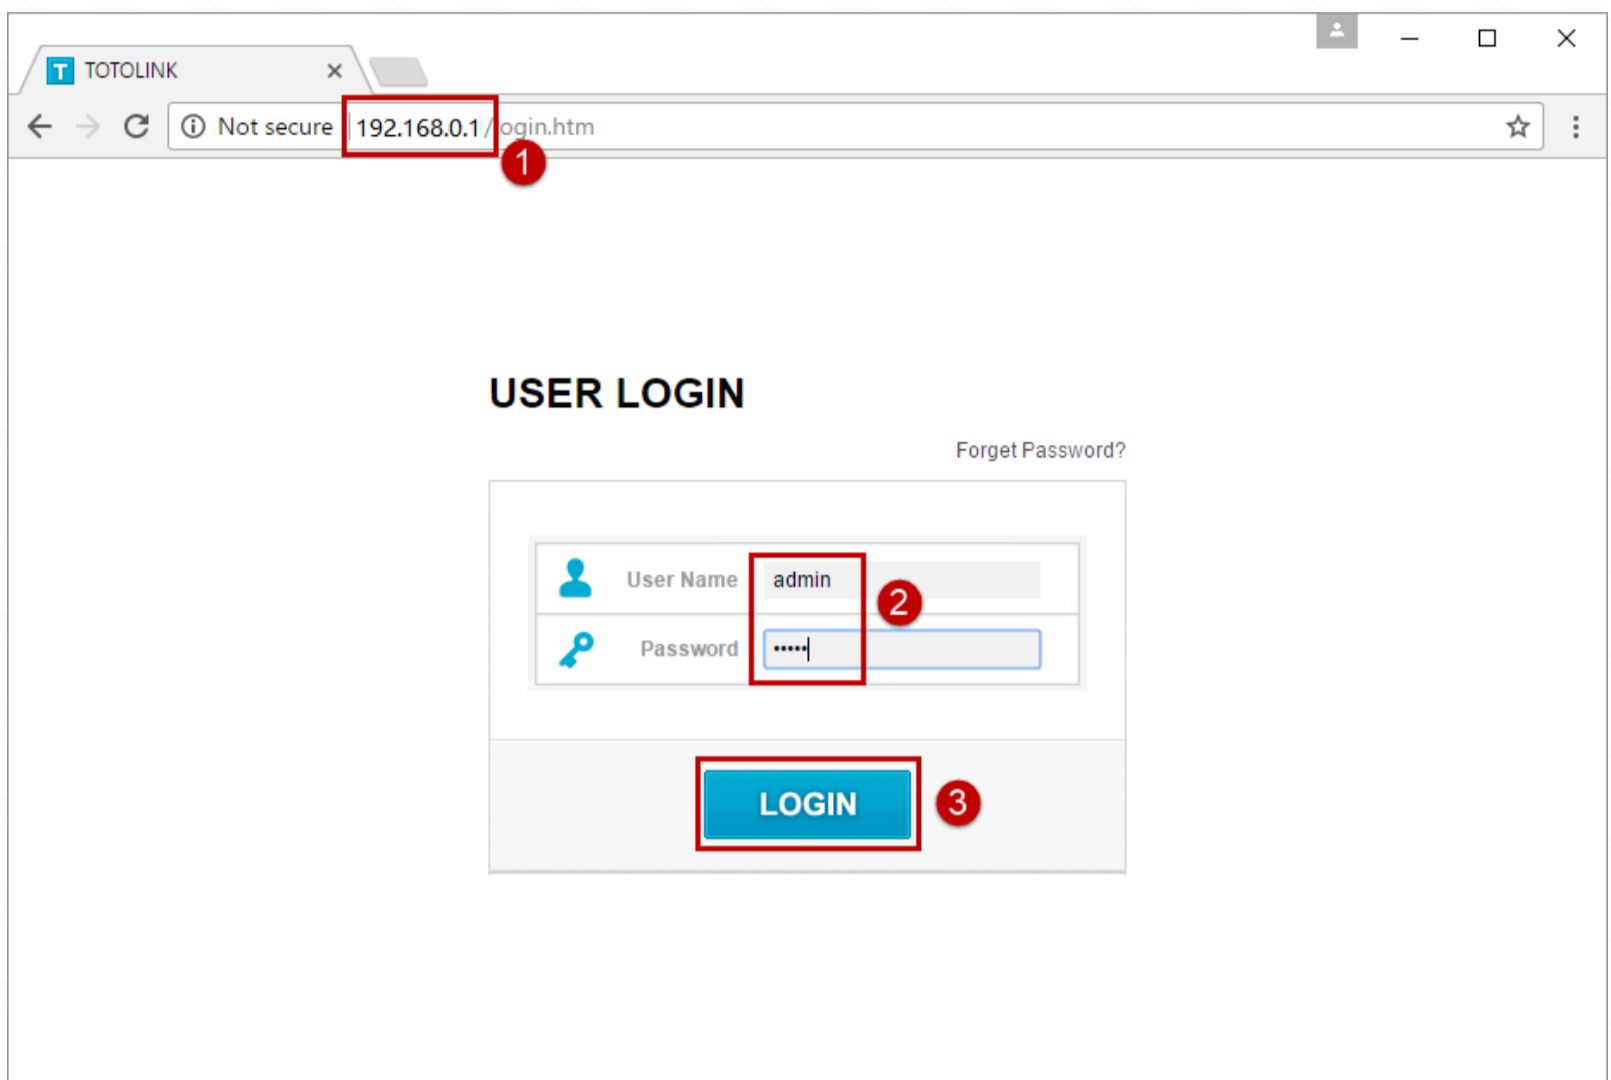

STEP-2: View or modify the wireless parameters


2-1. Check or modify in Easy Setup page.

Login management interface, first enter the **Easy Setup** interface, you can see **wireless settings**, as follows:

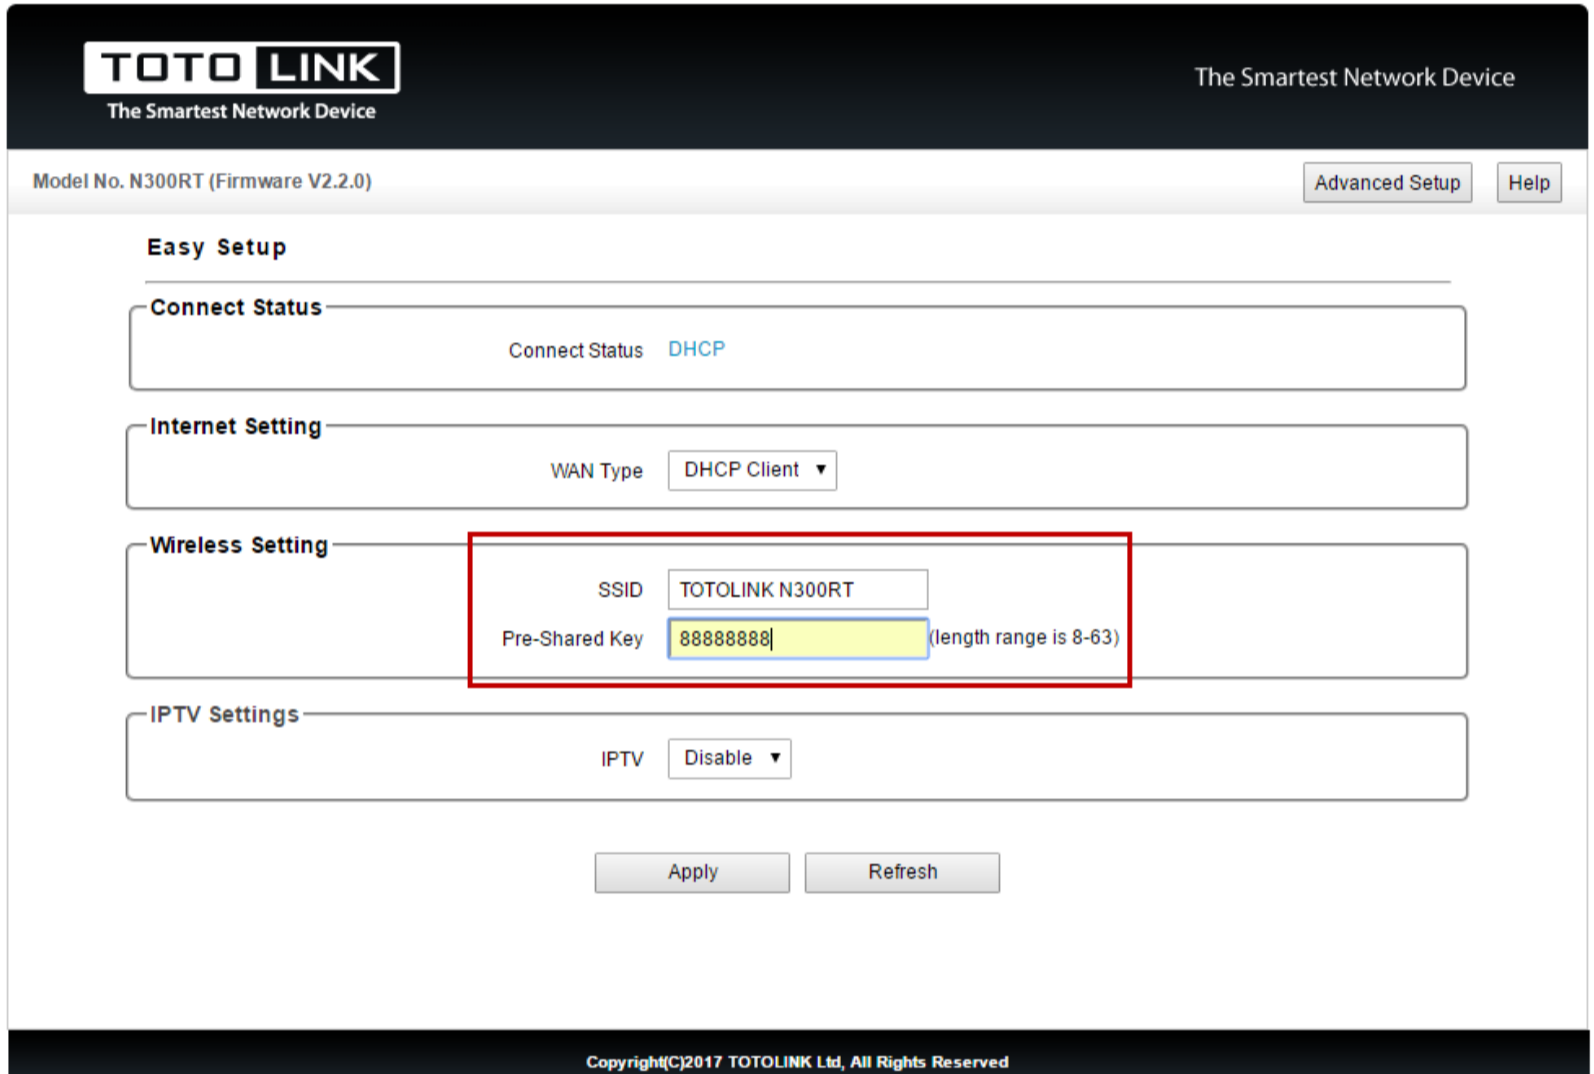


2-2. Check and modify In the Advanced Setup.


If you also need to set more parameters for WiFi, you can enter the **Advanced Setup** interface to set up.

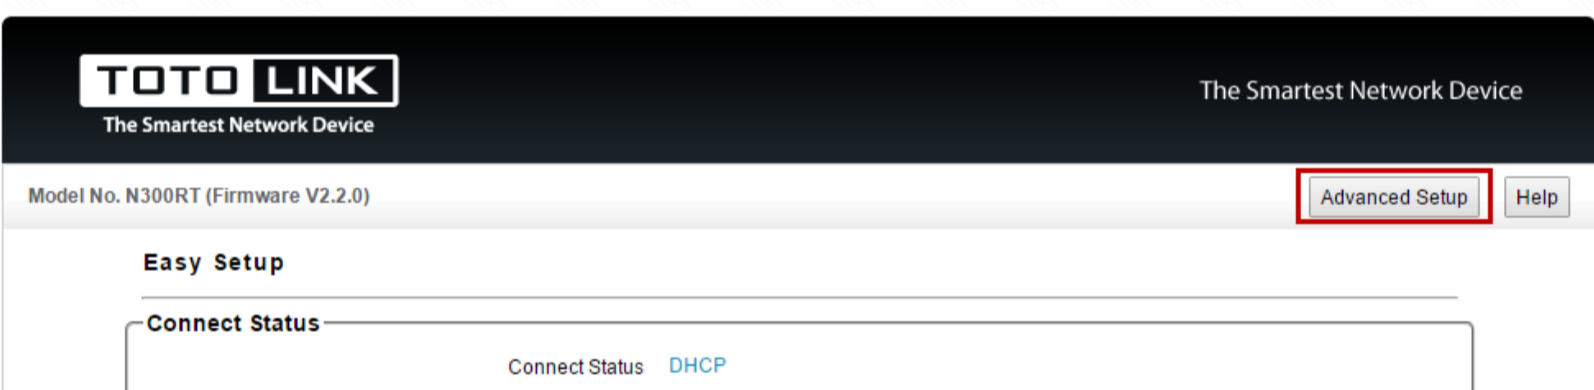

Set the SSID and password according to the following procedure.

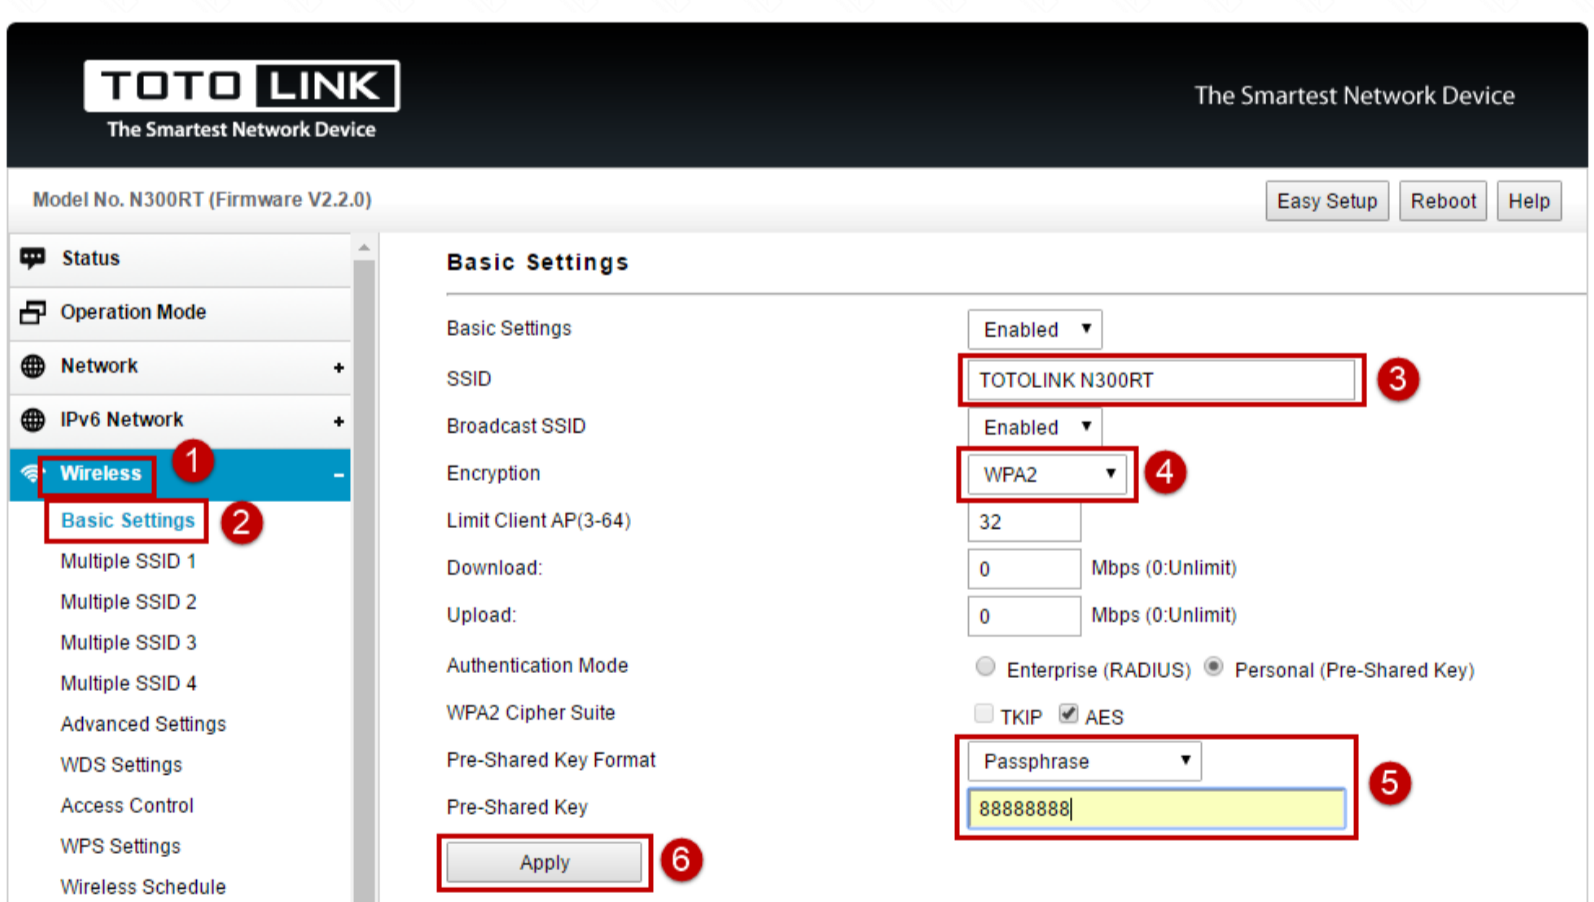

You are also able to set the **Channel Width, Data Rate, RF Output Power**.

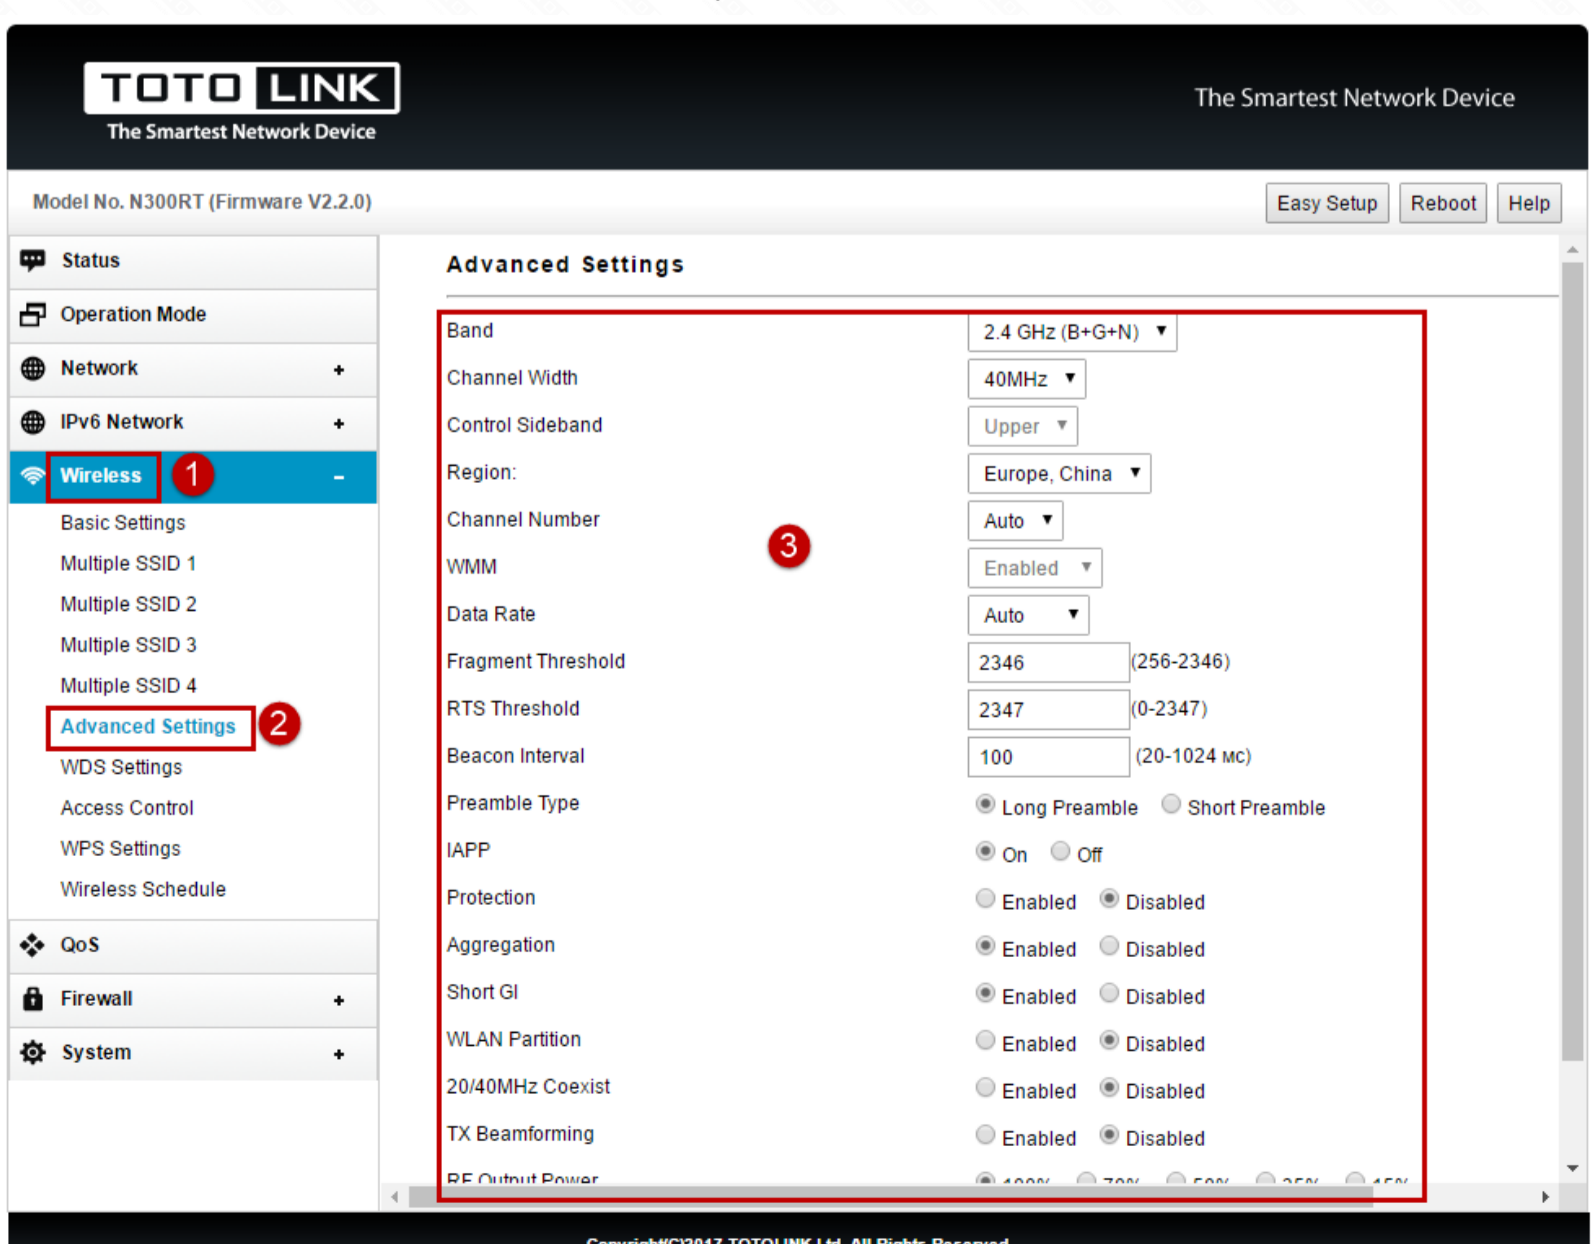

Questions and Answers

Q1: Should I restart the router after setup wireless information?

A: After setting, you need to wait a few seconds for the wireless information to take effect.