

 
## **Quick Installation Guide**

Suitable for: A650USM/A650UA/N150UA/N160USM

Copyrights © TOTOLINK All rights reserved. Website: http://www.totolink.net Information in this docutment is subject to change without prior notice.

(Take A650USM as example)

Plug the Wireless USB Adapter into the computer's USB port. (Note: It is pre-installed driver, requiring no extra CD.)



2 Double click "This PC" icon to find the "CD Driver TOTOLINK A650USM" icon, and then double-click it. (Note: The icon is based on Windows 10, it may be different on other Windows.)



3 Double click the "RTKAutoInstallSetup.exe" icon to start the installation.



Click "Install" on the pop-up page.



5 It takes several seconds to finish the installation, please wait until the installation page disappears.



6 After installing the Driver, please click the Wi-Fi icon to open the Wi-Fi list. Then click your Wi-Fi name and input the correct password to connect. Now, you could enjoy the Wi-Fi on your computer.

(If the Wi-Fi icon can not be found, please restart your computer and try again.)

