

### LEDs, Ports, Buttons

System indicator	On	Power on.
	Off	Power off.
	Blinking every one second	Router is working normally.
WAN/LAN indicator	Blinking quickly	The router is being reset, ready to reboot.
	On	Port connected.
	Off	Port disconnected.
	Blinking	The connected port is transmitting data.


DC Power Port	Connect to the power supply.
WAN Port	Connect to the Internet.
LAN Ports	Connect to PCs.
USB 3.0 Port	Connect to the USB Storage.
Power Button	Turn On/Off the router.
RST Button	Reset the router to factory settings.
WPS Button	Activate the WPS function: press and hold the button until the System indicator turns solid light.

# 2 Configure the Router on Phone

- 1 Activate the WLAN function on your Phone and connect to TOTOLINK\_A7100RU or TOTOLINK\_A7100RU\_5G. Then run any Web browser and enter <http://itotolink.net> in the address bar.(P1)
- 2 Enter **admin** for the password and then click **LOGIN**.(P2)
- 3 Time Zone setting. According to your location, please click the Time Zone to choose a correct one from the list, then click **Next**.(P3)

- 4 Internet Setting. Choose a suitable connection type from the list and fill in the information required, then click **Next**.(P4/P5/P6)
- 5 Wireless Setting. Create passwords for 2.4G and 5G Wi-Fi (Here users could also revise the default Wi-Fi name) and then click **Next**.(P7)
- 6 For security, please create a new Login Password for your router, then click **Next**.(P8)
- 7 The coming page is the Summary information for your setting. Please remember your Wi-Fi Name and Password, then click **Done**.(P9)
- 8 It takes several seconds to save the settings and then your router will restart automatically. This time your Phone will be disconnected from the router. Please back to the WLAN list of your phone to choose the new Wi-Fi name and input the correct password. Now, you could enjoy the Wi-Fi.(P10)

Connection Type	Description
Static IP	Input the IP address, Subnet Mask, Default Gateway, DNS from your ISP.
Dynamic IP	No information required. Please confirm with your ISP if Dynamic IP is supported.
PPPoE	Input User Name and Password from your ISP.
PPTP	Input Server Address, User Name and Password from your ISP.
L2TP	Input Server Address, User Name and Password from your ISP.

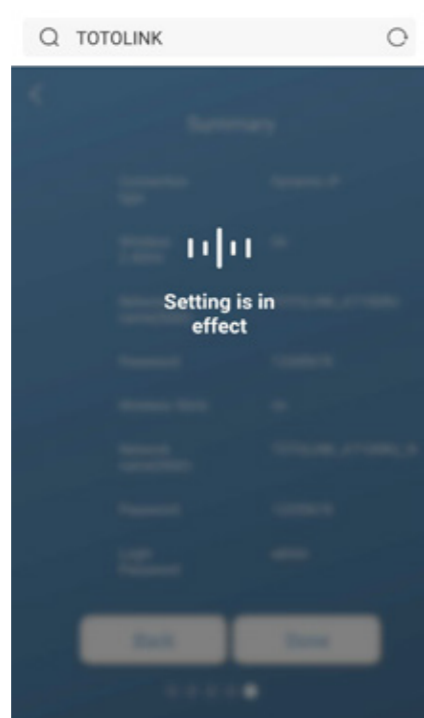

# 3 FAQ

- 1. Unable to log in the router's web page on Phone?**  
Please check if your Phone has wireless connected to the router and make sure you have entered the correct default gateway <http://itotolink.net>
- 2. How to reset the router to factory default settings?**  
Keep the router powered on, press and hold the RST button until the System indicator blinks quickly(about 10 seconds).
- 3. How to do if forgetting the router's Login Password ?**  
Reset the router to the factory settings. The Password will be resumed to be **admin**.
- 4. How to do if forgetting the passwords of the Wi-Fi?**  
Log in the router and then click the **Wireless** menu to check or revise the present Wi-Fi passwords.

ed in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference  
(2) This device must accept any interference received, including interference that may cause undesired operation.

**RF Radiation Exposure Statement**  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .  
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.  
This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Manufacturer: ZIONCOM ELECTRONICS (SHENZHEN) LTD.  
Address: Room 702, Unit D, 4 Building Shenzhen Software Industry Base, Xuefu Road, Nanshan District, Shenzhen, Guangdong, China