




Quick Installation Guide

AC1200 Wireless Dual Band Gigabit Router

Apply to: A3002R, A3002RU
Take A3002RU as an Example

Copyrights © TOTOLINK. All Rights Reserved. <http://www.totolink.net>
Information in this document is subject to change without prior notice.

1 Hardware Installation

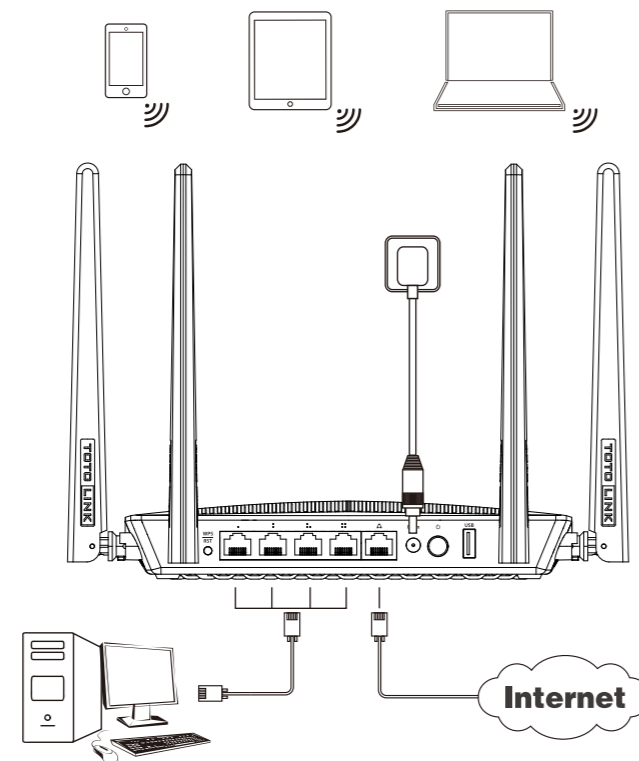

Default Wi-Fi Name:
TOTOLINK_A3002RU
TOTOLINK_A3002RU_5G


LEDs	Status	Description
System	Off	System is not running or didn't boot.
	On	System is booting.
	Blinking	System is running normally.
2.4G/5G	Off	2.4G/5G Wi-Fi was turned off.
	On	2.4G/5G Wi-Fi is working normally.
WAN / LAN 1-4	Off	Corresponding port disconnected.
	On	Corresponding port connected.
	Blinking	Corresponding port is transmitting data.
USB	Off	USB port disconnected
	On	USB port connected

Ports and Buttons	Description
DC In	Connect to the Power Source.
Power Button	Control the power supply to the router.
WAN Port	Connect to the Internet.
LAN1-LAN4 Ports	Connect to the computers.
USB Port	Connect to the USB storage or other USB devices.
RST/WPS Button	WPS: Press and hold for 1-3 seconds to activate the WPS function. Reset: Press and hold the button(for more than 5 seconds) until the System indicator becomes quick blinking light to reset the router.


2 Configure the Router on Phone

(choose one way from phone or computer to configure)

- Connect the Wi-Fi of the router with your Phone. Find "TOTOLINK_A3002RU" or "TOTOLINK_A3002RU_5G" from the WLAN list on your Phone, and choose one of them to connect.(P1)
- Open your phone browser, and enter <http://itotolink.net> in the address bar. Then enter **admin** for the password, then click **LOGIN**.(P2)
- Click **Quick Setup** on the coming page.(P3)
- Choose operation mode, take Gateway mode as an example, then click **Next**.(P4)

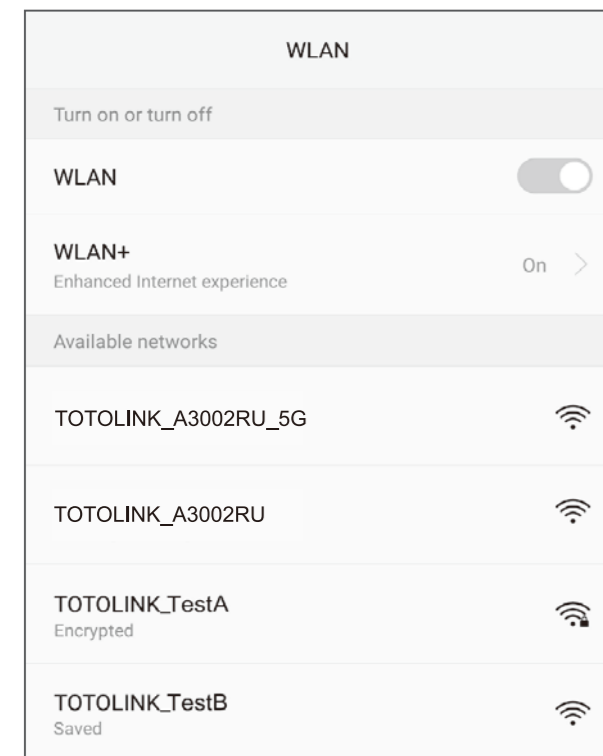

P1

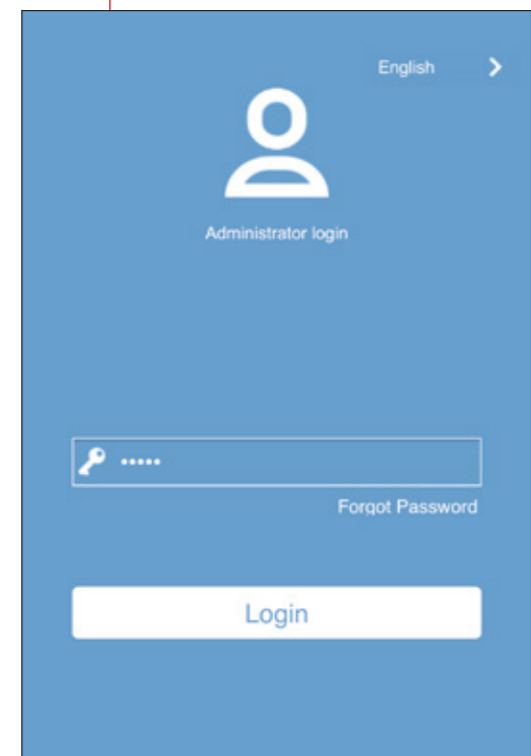

P2




P3




P4


- Internet Setting. Choose a suitable connection type from the list and fill in the information required, then click **Next**.(P5/P9)
- Wireless Settings. Create passwords for 2.4G Wi-Fi and 5G Wi-Fi (Here users could also revise the default Wi-Fi name) and then click **Next**.(P6)
- IPTV mode, choose Disabled, Bridge or Custom, then click **Next**.(P7)
- The coming page is the summary information for your setting. Please remember your Wi-Fi name and password, then click **Done**. Then your router will restart automatically. This time your phone will be disconnected from the router. Please back to the WLAN list of your phone to choose the new Wi-Fi name and input the correct password. Now, you could enjoy the Wi-Fi.(P8)

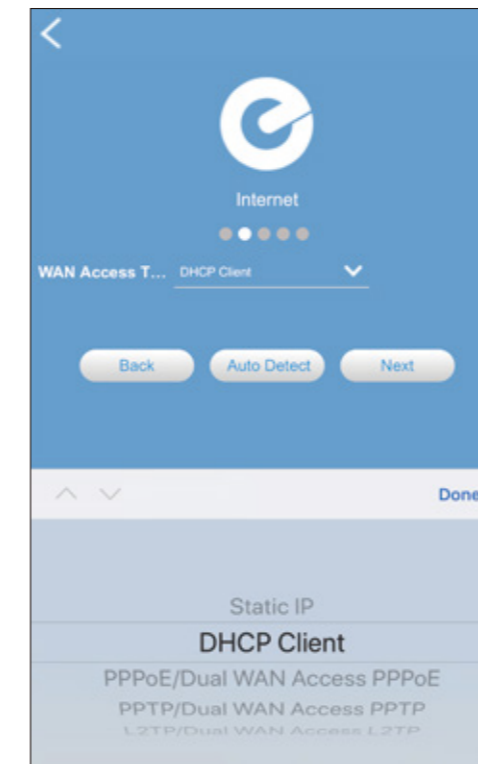


P5

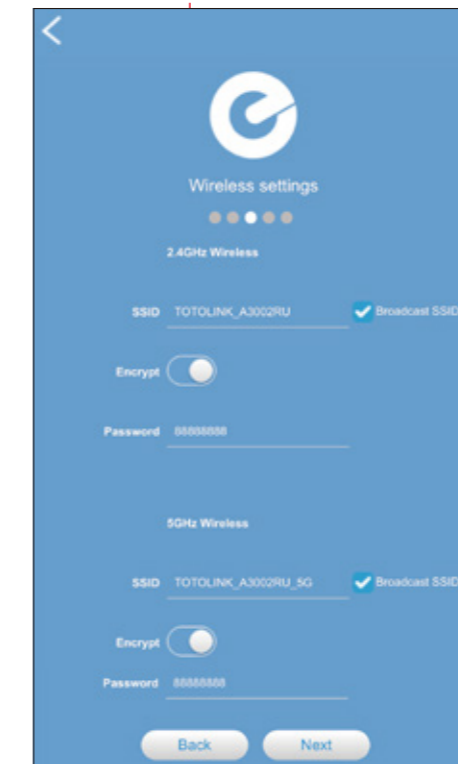

P6

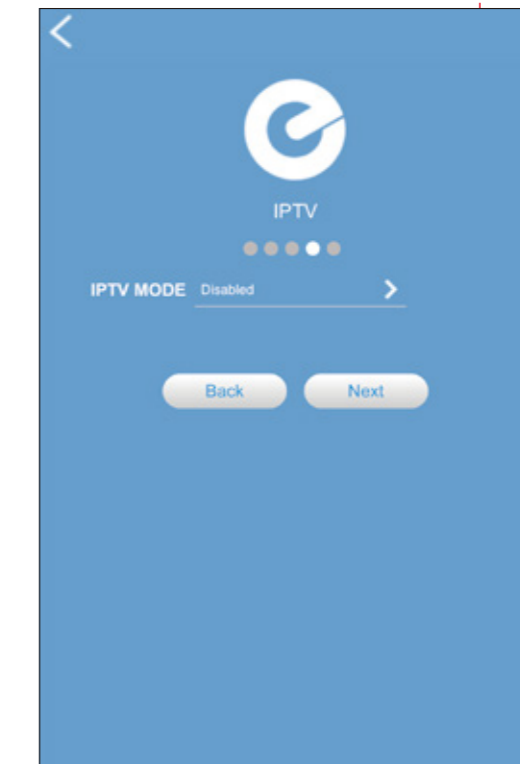

P7

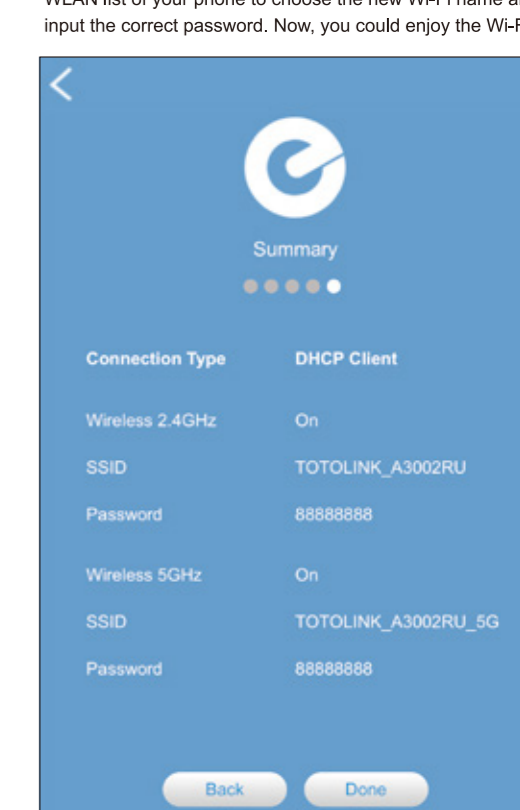


P8

Connection Type	Description
Static IP	Input the IP address, Subnet Mask, Default Gateway, DNS from your ISP.
Dynamic IP	No information required. Please confirm with your ISP if Dynamic IP is supported.
PPPoE	Input User Name and Password from your ISP.
PPTP	Input Server Address, User Name and Password from your ISP.
L2TP	Input Server Address, User Name and Password from your ISP.

P9


- Click **Easy Setup** in the top left corner of the page to complete the network settings.
 - Choose operation mode, take Gateway mode as an example, then click **Next**.
 - Internet Setting. Choose a suitable connection type from the list and fill in the information required, then click **Next**.
 - Wireless Setting. Create passwords for 2.4G Wi-Fi and 5G Wi-Fi (Here users could also revise the default Wi-Fi name) and then click **Next**.
 - IPTV mode, choose Disabled, Bridge or Custom, then click **Next**.
 - The coming page is the summary information for your setting. Please remember your Wi-Fi name and password, then click **Done**. Your router will restart automatically. Please reconnect. Now, you could enjoy the Wi-Fi.

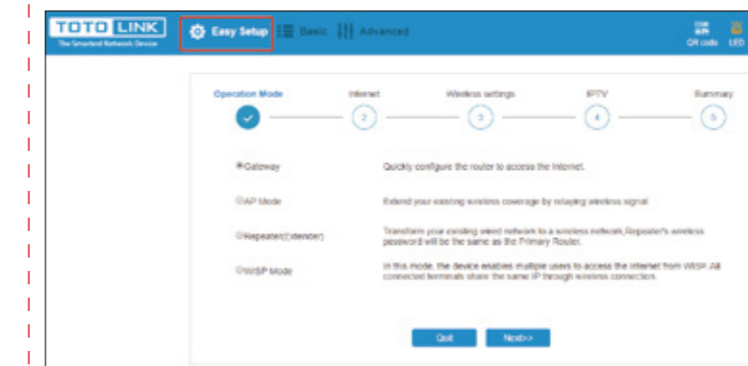

3 Configure the Router on Computer

(choose one way from phone or computer to configure)

- Connect any interface of LAN1-LAN4 using Ethernet cable, then open any web browser and enter <http://itotolink.net> in the address bar.
- Enter **admin** for the password, then click **LOGIN**.

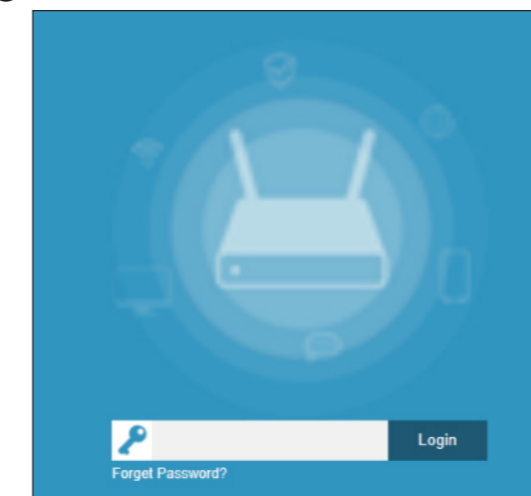

4 FAQs (Frequently Asked Questions)

- Unable to open the router's login page on the browser?**
Please check if your Phone has connected to the router and make sure you have entered the correct default gateway <http://itotolink.net>
- If I forget the router's login password, how to reset to the factory settings?**
Keep the router powered on, then press and hold the RST/WPS button for above 5 seconds until system indicator becomes blinking quickly. The router will restart automatically, wait for a while, the password would be resumed to admin.

- How to do if forgetting the password of the Wi-Fi?**
Please connect any LAN port of the router to the computer with RJ45 cable and then open any web browser to log in the router to check the Wi-Fi password in the **Basic—Wireless Network**. Please ensure your computer has been set to "Obtain an IP address automatically" in advance.
- How to open the function of Band Steering to use the 2.4G and 5G Wi-Fi by a same SSID?**
Keep the router working normally, open any browser on your computer, login the Web management page. Click Basic—Wireless Network, turn on Band Steering, then wait the setting to complete. If Wi-Fi is disconnected, please reconnect.

FCC warning:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference
 (2) This device must accept any interference received, including interference that may cause undesired operation.

RF Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Manufacturer: ZIONCOM ELECTRONICS (SHENZHEN) LTD.
Address: Room 702, Unit D, 4 Building Shenzhen Software Industry Base, Xuefu Road, Nanshan District, Shenzhen, Guangdong, China