

The Smartest Network Device

Quick Installation Guide


Wireless N Range Extender

Model No.: EX200

V1.0 | 1712

Copyrights © TOTOLINK. All rights reserved. Website: <http://www.totolink.net>
Information in this document is subject to change without prior notice.

Product Introduction

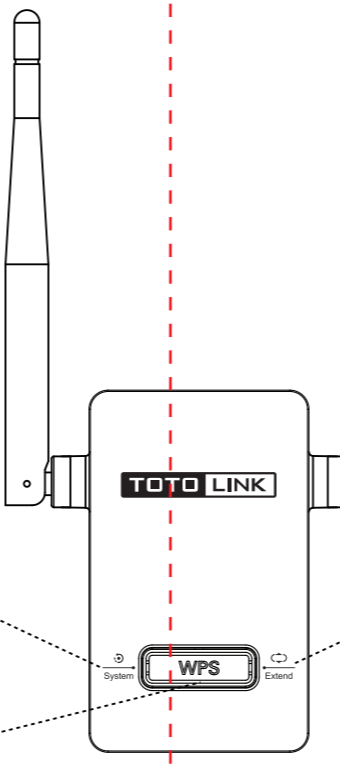


On: The device is starting up or waiting for extending.

Slow-blinking: The device is working normally.

Quick-flashing: The device is to restart.

Off: The device is power off.

WPS: Press the button for about 2-3 seconds to enable WPS.

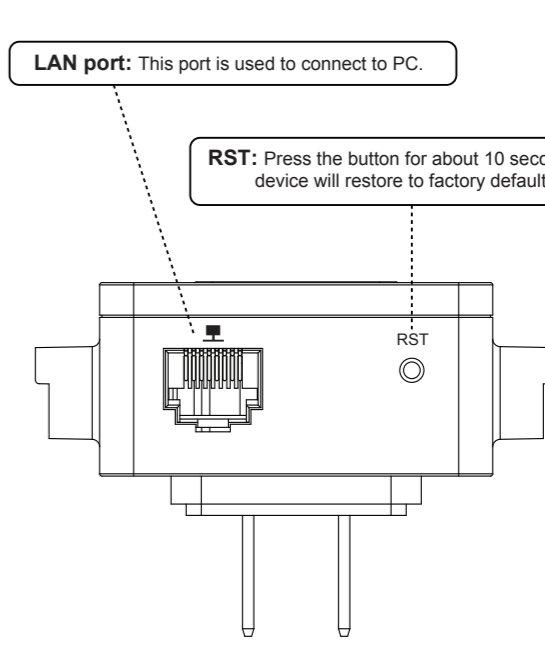

LAN port: This port is used to connect to PC.

RST: Press the button for about 10 seconds, the device will restore to factory default settings.

On: Extending successfully.
Green-Good; Yellow-Normal; Red-Bad.


Slow-blinking: The device is extending to upper Router/AP.


Quick-flashing: The device is to restart.


Off: No extending.


Method One: Quick Setup by Smart Phone


- 1 Power on.** Plug the device into any wall socket that near the router. Wait until the System LED blinks slowly.
- 2 Connect to the Extender.** Using your smart phone to search Wi-Fi **TOTOLINK_EX200**, (**Settings—Wi-Fi**)
- 3 Login.** The Setting page will turn up automatically. Click **Extender Mode**. If below window doesn't appear, please open a browser and enter **192.168.0.254** manually.
- 4 Extend Wi-Fi.** Wait for a while, the Extender auto-detects APs nearby. Choose your **router's 2.4GHz SSID**.
- 5 Configure.** Enter its wireless password. Either keep the default SSID or customize it for extended 2.4GHz wireless network. Verify your settings and click **Connect**.
- 6 Verify.** Check the LED status to verify whether the Wi-Fi extension is successful.

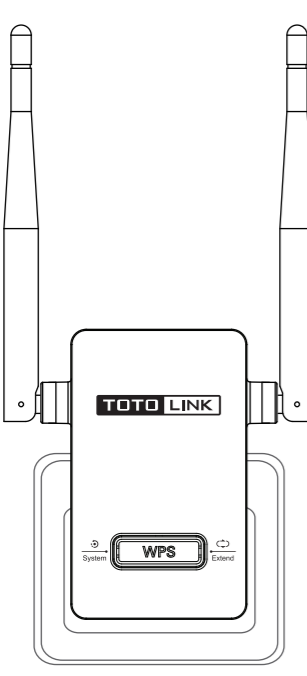


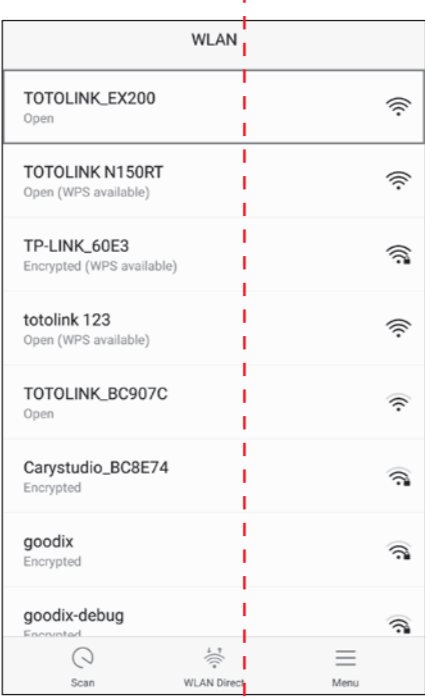

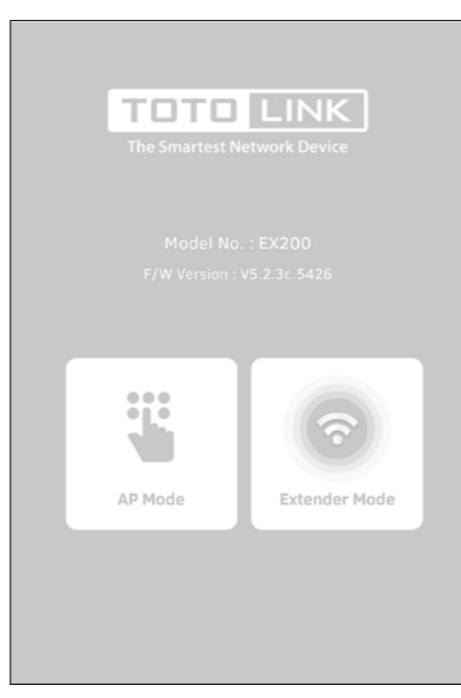


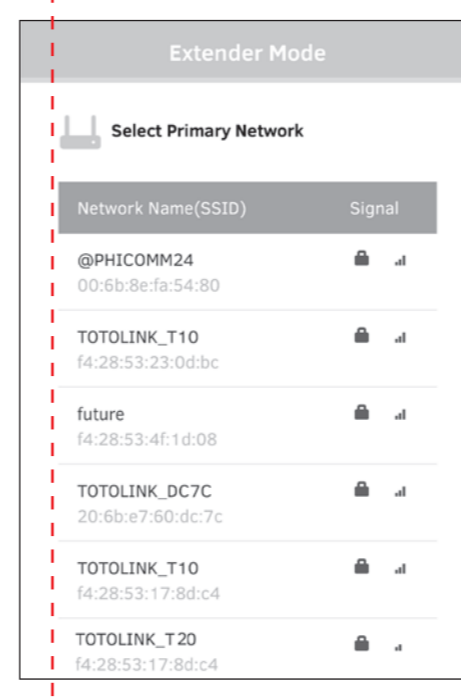


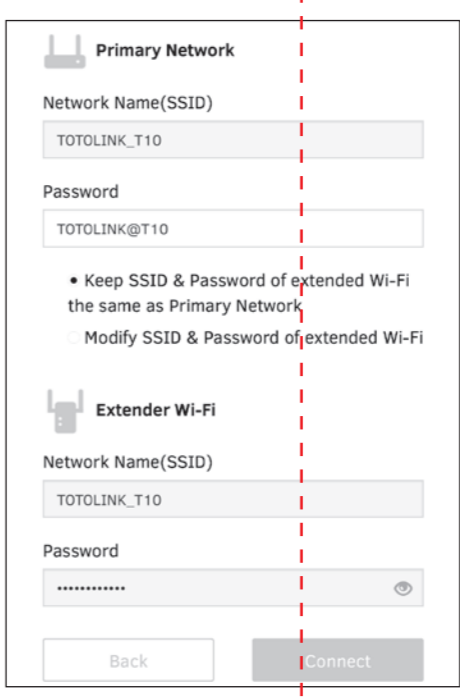

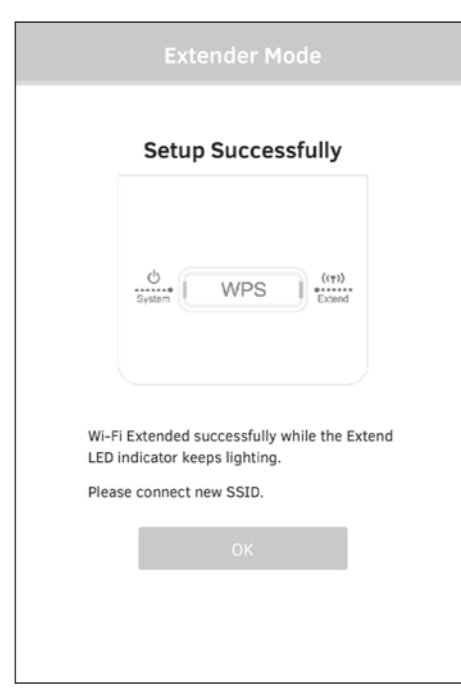

Relocate



- 1** Plug the extender into wall socket that halfway between your router and the Wi-Fi dead zone. Wait about 30 seconds until the Extend LED light turns solid green or yellow. If not, please relocate it closer to your router to achieve better signal quality.
- 2** In order to make full use of extender, please keep the antennas of the extender perpendicular to the horizontal plane. See below:

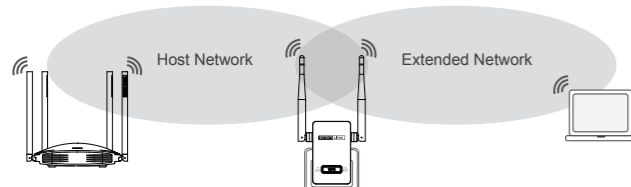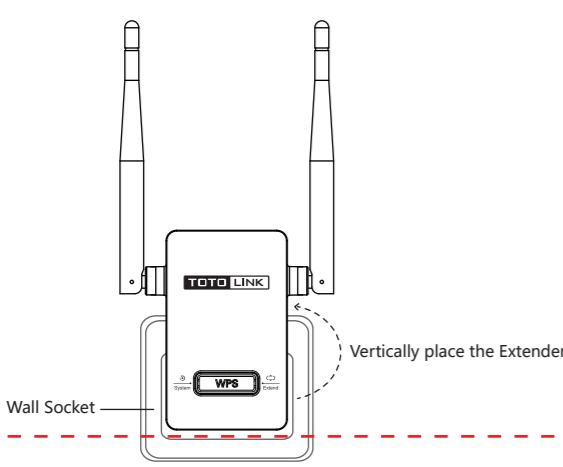Horizon Line

Method Two: Wi-Fi Extension by WPS Button

- 1 Power on.** Plug the device into any wall socket that near the router. Wait until the System LED blinks slowly.
- 2** Press WPS button on your router for about 2 seconds.
- 3** Press WPS button on Extender for about 2 seconds.
- 4** The Extend LED turns to solid light, Wi-Fi extension successful. Please refer to **Relocate** to place the Extender.

SSID: TOTOLINK_EX200

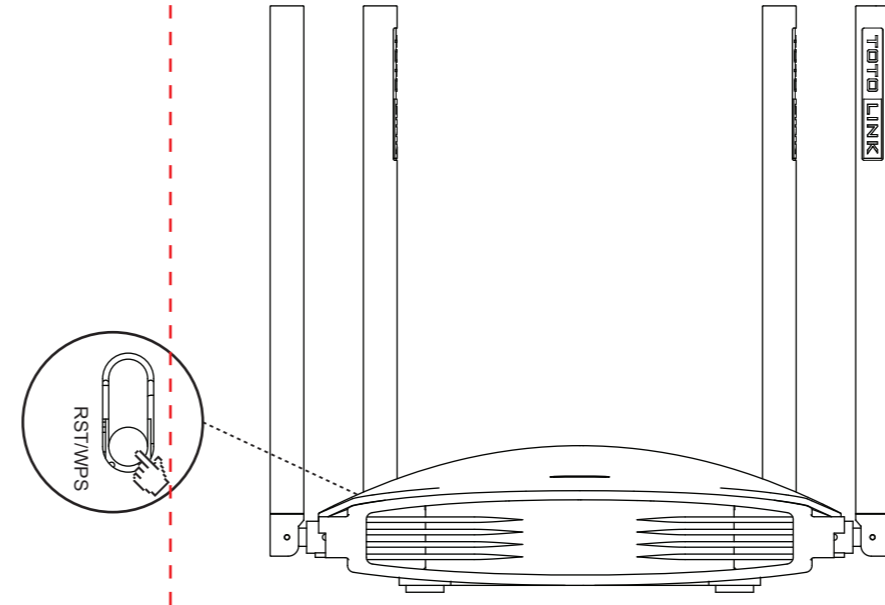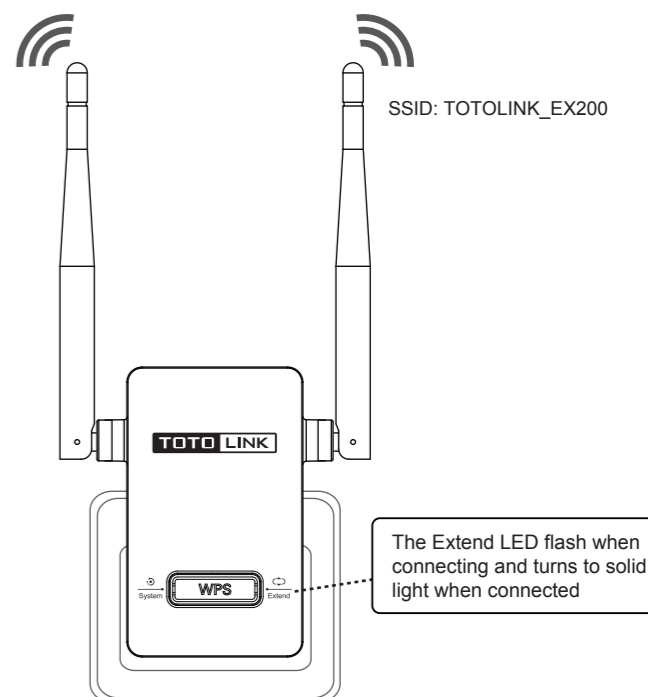The Extend LED flash when connecting and turns to solid light when connected.



FAQ(Frequently Asked Questions)

- 1** What should I do if I cannot access the extender's web management page?
 - A1: Make sure you have connected to the wireless network name of the extender.
 - A2: Open any browser, enter 192.168.0.254 in the address bar and press Enter.
 - A3: Reset the extender and connect to it again.
- 2** How to reset the extender to factory default settings?

Keep the extender power on, use a pin to press the RST button on the bottom of device. When both System and Extend LED blinks, release the button. The device will restore to factory default settings.

4 The Extend LED turns to solid light, Wi-Fi extension successful. Please refer to **Relocate** to place the Extender.

Wi-Fi: Upper router's SSID and password

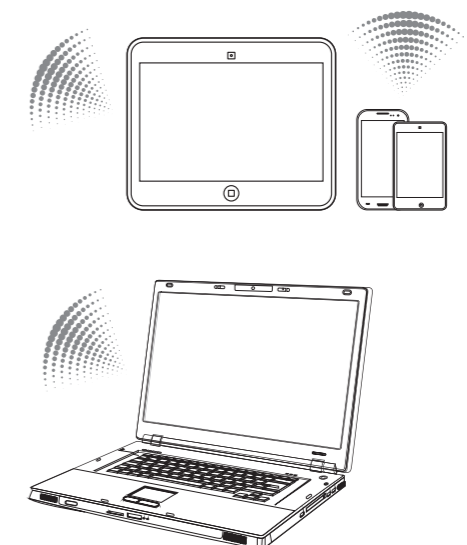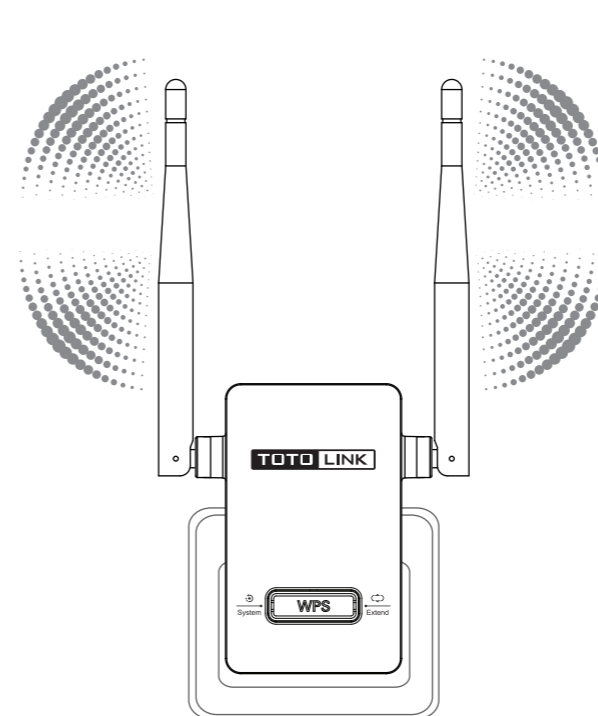

NOTE:
EX200's default Network Name (SSID) is TOTOLINK_EX200 (no encryption). With success repeater connection, this SSID (TOTOLINK_EX200) will change to the same SSID (with same encryption) of upper Router/AP. After deployment, just connect to the Router/AP's SSID. Congratulations, you have extended your WiFi coverage successfully.