TOTO LINK
The Smartest Network Device

Quick Installation Guide
300Mbps Wireless N Router

Model No.: N200RE

Installation Diagram

Default Wi-Fi Name: TOTOLINK_N200RE

Internet

Wall Socket

Smartphone

Tablet

PC

Power Port   WAN   LAN2   LAN1

LEDs, Ports, Buttons

CPU indicator	On	Power on.
	Off	Power off.
	Blinking every one second	Router is working normally.
	Blinking quickly	The router is being reset, ready to reboot.
WAN/LAN indicator	On	Port connected.
	Off	Port disconnected.
	Blinking	The connected port is transmitting data.
Wi-Fi indicator	On	Wi-Fi is working normally.
	Off	Wi-Fi was turned off.

| DC Power Port	Connect to the power supply.
WAN Port	Connect to the Internet.
LAN Ports	Connect to PCs.
RST/WPS Button	Activate the WPS function: press and hold the button for 1-3 seconds.
	Reset the router to factory settings: press and hold the button for 5-8 seconds, CPU indicator will become solid light.

2 Configure the Router on Phone

① Activate the WLAN function on your Phone and connect to TOTOLINK_N200RE. Then run any Web browser and enter **http://itotolink.net** in the address bar.(P1)

② Enter **admin** for the password and then click **LOGIN**.(P2)

③ Time Zone setting. According to your location, please click the Time Zone to choose a correct one from the list, then click **Next**.(P3)

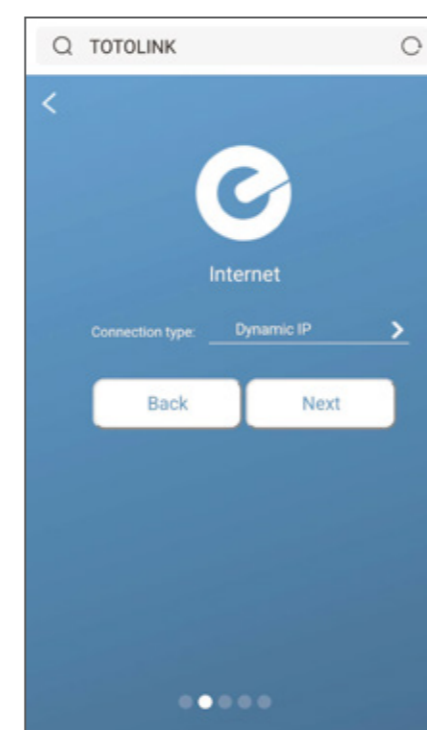④ Internet Setting. Choose a suitable connection type from the list and fill in the information required, then click **Next**.(P4/P5/P6)
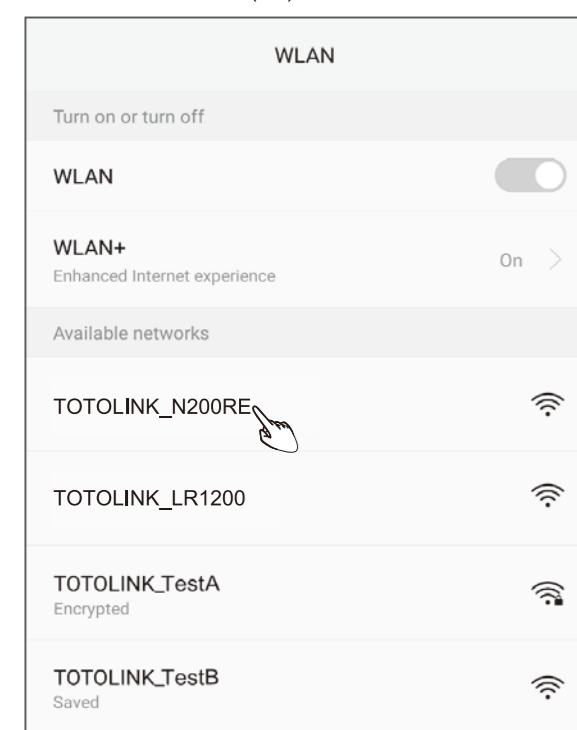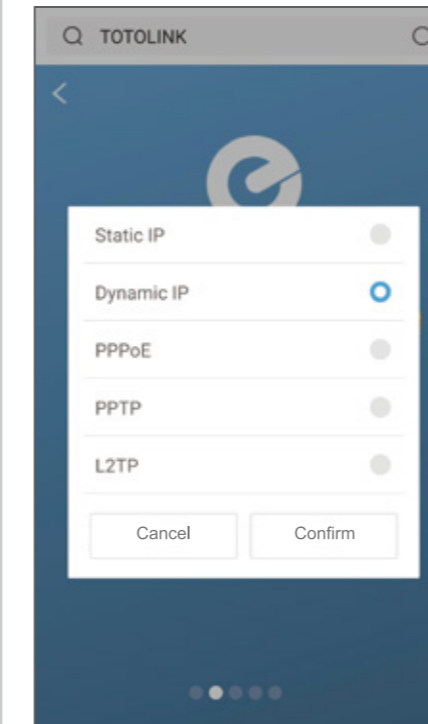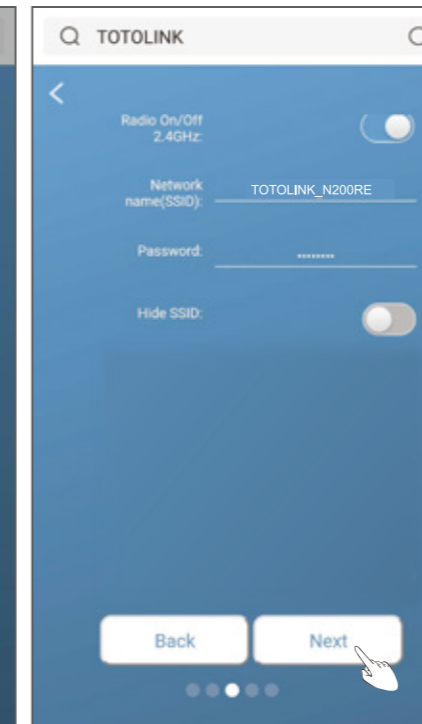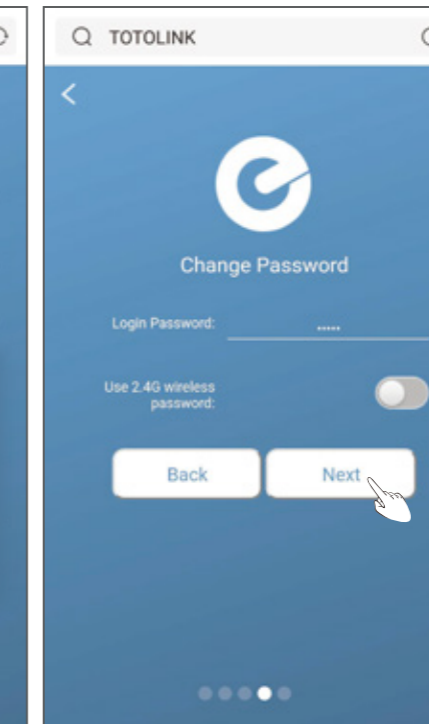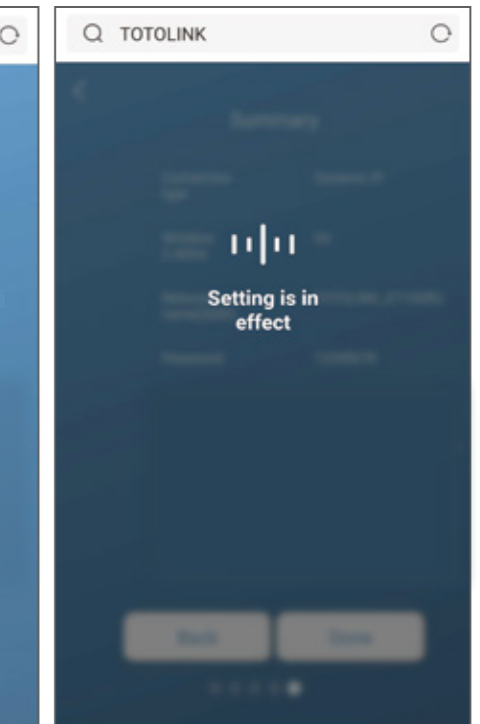
(P1)
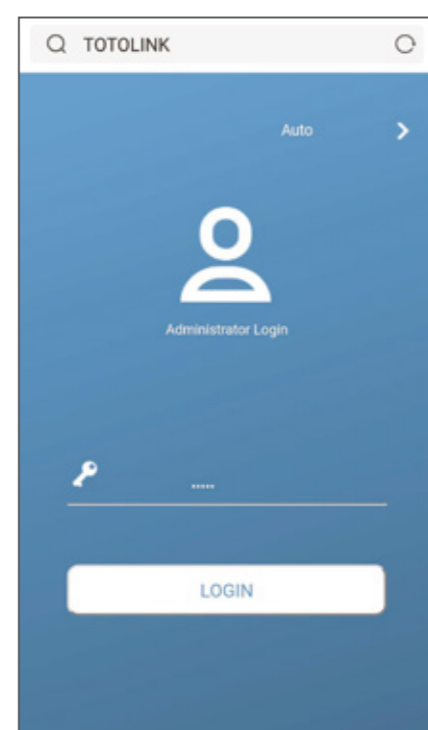
(P2)
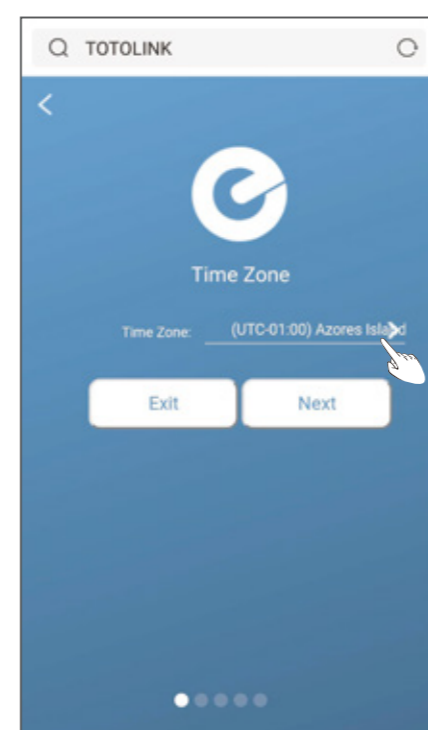
(P3)

(P4)

2 Configure the Router on Phone

(P5)

(P7)

(P8)

(P9)

(P10)

Connection Type	Description
Static IP	Input the IP address, Subnet Mask, Default Gateway, DNS from your ISP.
Dynamic IP	No information required. Please confirm with your ISP if Dynamic IP is supported.
PPPoE	Input User Name and Password from your ISP.
PPTP	Input Server Address, User Name and Password from your ISP.
L2TP	Input Server Address, User Name and Password from your ISP.

(P6)

⑤ Wireless Setting. Create passwords for 2.4G Wi-Fi (Here users could also revise the default Wi-Fi name) and then click **Next**.(P7)

⑥ For security, please create a new Login Password for your router, then click **Next**.(P8)

⑦ The coming page is the Summary information for your setting. Please remember your Wi-Fi Name and Password, then click **Done**.(P9)

⑧ It takes several seconds to save the settings and then your router will restart automatically. This time your Phone will be disconnected from the router. Please back to the WLAN list of your phone to choose the new Wi-Fi name and input the correct password. Now, you could enjoy the Wi-Fi.(P10)

3 FAQs

1. Unable to log in the router's web page on Phone?
Please check if your Phone has connected to the Wi-Fi of the router and make sure you have entered the correct default gateway **http://itotolink.net**.

2. How to reset the router to factory default settings?
Keep the router powered on, then press and hold the RST/WPS button (for about 5-8 seconds) until CPU indicator becomes blinking light quickly.

3. How to do if forgetting the router's Login Password?
Reset the router to its factory settings. The Password would be resumed to **admin**.

4. How to do if forgetting the password of the Wi-Fi?
1)Connect any LAN port of the router and then log in the router on computer to check the Wi-Fi password.
2)Reset the router and configure the router again.